



# AGD301

## 3-Axis Controller with Integrated Drives

### Product Manual



[www.agito-akribis.com](http://www.agito-akribis.com)

Member of Akribis Systems group

## Revision History

Version	Description	Date
3.2	Updated electrical interface connection diagrams and pinout drawings. Revised the connector pin names to match the terminal names of electrical interface connection diagrams. Corrected Hall sensors following inputs numbers. Revised the main power connector and reverse polarity protection description. Corrected BiDirConfig.bit number for Bi-Dir Diff I/O 2 to 8. Added thermostat option to PT100 port. Deleted AqB encoder disconnected function.	7 July 2025
3.1	Updated description for main power connection.	13 July 2023
3.0	Updated voltage specifications. Updated connector information for electrical interfaces. Added safety inputs specifications and updated Safety Circuitry. Various, minor text corrections.	9 July 2023
2.2	1.4. Corrected Electrical Specifications table: Removed Differential Inputs/Differential Outputs. Added Bi-Directional Differential I/Os (RS422): 8 1.4 Corrected Encoder Ports Specifications table: Opto-isolated 5V with internal power supply only. 3.4.2. Corrected Description in Connector table: Pin 1: 9-36 VDC 3.4.8. Hall Sensors Circuitry: Corrected name of connector: A2/B2/C2 3.4.13 Interface X4: General Purpose I/Os: Added 8 digital outputs in description.	15 May 2022
2.1	1.4. Corrected Electrical Specifications for AGD301-ET-2D09 model. 3.4.8. Updated descriptions for Hall sensors in Connector A2, A3 and A4 (HALLS Axis A, B and C) tables. 3.4.13. Updated descriptions for pulse/direction inputs in Connector X4: GENERAL I/O table. Improved quality of dimensions and pinout diagrams.	4 May 2022
2.0	Major revision	9 Dec 2021
1.0	Initial release	3 Aug 2020

## Contact Information

Manufacturer Agito Akribis Systems Ltd., Member of Akribis Systems Group  
 Address 56 Serangoon North Avenue 4, Singapore 555851  
 Email [info@akribis-sys.com](mailto:info@akribis-sys.com)  
 Website [www.agito-akribis.com](http://www.agito-akribis.com)

## Copyright Notice

©2025 Agito Akribis Systems Ltd.

All rights reserved. This work may not be edited in any form or by any means without written permission of Agito Akribis Systems Ltd.



### **Products Rights**

AGDx, AGCx, AGMx, AGAx, AGIOx, and AGLx are products designed by Agito Akribis Systems Ltd. in Israel. Sales of the products are licensed to Akribis Systems Pte Ltd. under intercompany license agreement.

Agito Akribis Systems Ltd. has full rights to distribute above products worldwide.

### **Disclaimer**

This product documentation was accurate and reliable at the time of its release.

Agito Akribis Systems Ltd. reserves the right to change the specifications of the product described in this manual without notice at any time.

### **Trademarks**

Agito PCSuite is a trademark of Agito Akribis Systems Ltd..

Windows is a registered trademark of Microsoft Corporation.

MATLAB is a registered trademark of The MathWorks, Inc.

LabVIEW is a trademark of National Instruments Corporation.

### **Warranty**

This product is warranted to be free of defects in material and workmanship and conforms to the specifications listed in this manual, for a period of 12 months from the shipment date from factory.

## Contents

<b>1</b>	<b>Product Description</b>	<b>5</b>
1.1	General Description	5
1.2	Part Numbering	5
1.3	System Design	6
1.4	Technical Specifications	6
1.5	Motion Control Specifications	10
1.6	Environmental Specifications	11
<b>2</b>	<b>Safety</b>	<b>12</b>
2.1	Safety Symbols	12
2.2	Safety Guidelines	12
2.3	Compliance	13
<b>3</b>	<b>Installation</b>	<b>15</b>
3.1	Unpacking and Packing	15
3.2	Mounting	15
3.2.1	Mounting the AGD301	15
3.2.2	Mounting Multiple Motion Controllers	16
3.3	Electrical Installation	17
3.3.1	Power Wiring	17
3.3.2	Regeneration	17
3.3.3	Safe Operating Area	18
3.3.4	Grounding	20
	Ground Domains	21
	Grounding Policy	21
3.4	Electrical Interfaces	22
3.4.1	Interface X5: Main Power	22
3.4.2	Interface X6: Backup Power	23
3.4.3	Interface X7: I/O and Brake Power	24
3.4.4	Interfaces A4, B4, C4: Motors	25
3.4.5	Interface X3: Safety	26
	Safety Connection Diagram Example	27
3.4.6	Interface X10: Regeneration	29
3.4.7	Interfaces A1, B1, C1: Encoders	30
3.4.8	Interfaces A2, B2, C2: Hall Sensor and Static Brake	31
	Hall Sensor Connection Diagram Example	33
	Brake Connection Diagram Example	34
3.4.9	Interfaces A3, B3, C3: Digital and Analog I/Os	35
3.4.10	Interface X2: Ethernet (LAN)	39
3.4.11	Interfaces X8, X9: CAN, RS232, RS485	40
3.4.12	Interface X1: Micro-USB	41
3.4.13	Interface X4: General Purpose I/Os	42
	I/O Connection Diagram Example	45
	Isolated Digital Input 1 to 6, 7 to 12, 13 to 18	45
	Isolated Digital Output 1 to 3, 4 to 6, 7 to 9, 10 to 13, 14 to 17	46
	Analog Input 1 to 4	47
	Analog Output 1 to 4	47
	Bi-Directional Differential I/O 1 to 8	48
3.4.14	DIP Switches	49
3.4.15	Status LED	50

# 1 Product Description

## 1.1 General Description

AGD301 is a series of 3-axis, standalone, high performance programmable motion controllers with integrated servo amplifiers.

It is equipped with Ethernet, USB, CAN bus, RS232, and RS485 communication ports to interface with host devices such as PCs, PLCs, and HMIs. It can control any external driver via analog or digital command.

At 16 kHz sampling (profiler, position, velocity, and current control loops) frequency, AGD301 controllers are ideal for any tightly coordinated motion systems.

AGD301 has three integrated amplifiers, enabling it to drive three motors directly. It can drive all types of motors, such as steppers, voice coils, brushed or brushless motors, and including direct-drive linear and rotary motors.

Agito PCSuite software and IDE is used for AGD301 programming, configuration, tuning and operation. Agito PCSuite provides configuration wizard, time domain tuning and analysis, frequency domain identification and design, auto tuning and easy to use GUI for all the features of Agito controllers.



Figure 1. AGD301

## 1.2 Part Numbering

Product Description	Part Number Format
3-Axis Controller, Integrated Amplifiers	AGD301-ET-2Dxx[-CCC]

**ET:** Ethernet

**2D:** 12-90 VDC

**xx:** Continuous and peak current rating

05: (per axis) 5.6  $A_{rms}$  continuous, 11.2  $A_{rms}$  peak

09: (per axis) 9.0  $A_{rms}$  (up to 20  $A_{rms}$  for 3 axes) continuous, 18.0  $A_{rms}$  peak

**CCC:** Optional customization number

Example: **AGD301-ET-2D09-001**, 9  $A_{rms}$  continuous, 18.0  $A_{rms}$  peak current for each axis, with 16-bit analog input.

### 1.3 System Design

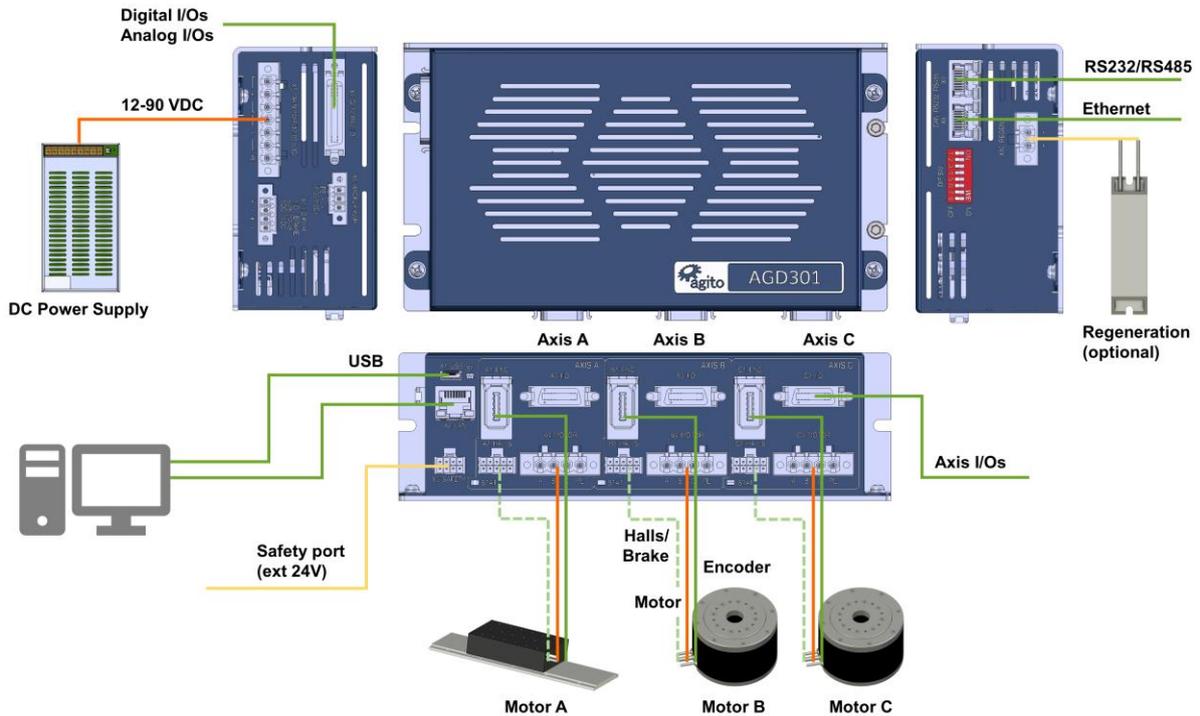


Figure 2. System Connection and Wiring

### 1.4 Technical Specifications

#### Electrical Specifications

Feature	AGD301-ET-2D05	AGD301-ET-2D09
Number of axes	3	
Nominal supply voltage	12–90 VDC	
Minimum supply voltage	11 VDC	
Maximum supply voltage	95 VDC	
Logic power supply (optional)	12–36 VDC	
Continuous output current (Internally limited by firmware)	5.6 A <sub>rms</sub> per axis	9.0 A <sub>rms</sub> per axis (limited to 20 A <sub>rms</sub> total for 3 axes)
Peak output current (Internally limited by firmware)	11.2 A <sub>rms</sub>	18.2 A <sub>rms</sub>
Output power @ 90 VDC	504 kVA	810 kVA
Peak current time	3 sec	
Output frequency	0–599 Hz	
Isolated digital inputs	27	
Isolated digital outputs	17	
Bi-directional differential I/Os (RS422)	8	
Analog inputs	4 (12-bit)	

Feature	AGD301-ET-2D05	AGD301-ET-2D09
Analog outputs	4 (16-bit)	
Brake outputs	3	
Encoder ports	3	
Hall sensor ports	3	
Regeneration output	1	
Motor types	Voice coil, brushed or brushless linear or rotary motor. 2-phase steppers (open and closed loop, micro-stepping)	
Communication	Ethernet, CAN RS232, RS485, USB	
PWM frequency	16 kHz	
Power supply to external devices	Voltage: 5V Overall max. current: 1.5A	

### Encoder Ports Specifications

Feature	Specification
Encoder types	Incremental AqB, Sin/Cos, Absolute EnDat 2.2, Absolute BiSS-C
Power supply to encoder	0.5 A per encoder port
Max. cable length	40 m
Incremental encoder	Hardware: Differential RS422/RS485 Max. input frequency: 6.25 MHz Termination: 120 Ω Commutation: Auto-phasing, Hall sensor
Sin/Cos encoder (on Main Encoder port only)	Hardware: Differential RS422/RS485, 1V pkp @2.5V Max. input frequency: 250 kHz Termination: 120 Ω Max interpolation: 13 bits (x 8192) Commutation: Auto-phasing, Hall sensor
Absolute BiSS-C	Hardware: Differential RS422/RS485, clock (MA), data (SLO) Clock frequency: 2 MHz Max. position bits: 32 bits Commutation: Auto-phasing, by absolute offset
Absolute EnDat 2.2	Hardware: Differential RS422/RS485, clock, data Clock frequency: 2 MHz Max. position bits: 32 bits Commutation: Auto-phasing, by absolute offset
Hall sensor	Opto-isolated 5V with internal power supply

I/O Specifications

Feature	Specification
Power supply for optically isolated I/Os	Voltage: 5–28 VDC
Optically isolated digital inputs	Type: PNP/NPN Propagation delay: 10 $\mu$ s Max. frequency: 100 kHz Functionality: limit switches, home, captures, start motion, gain scheduling, and others
Optically isolated digital outputs	Type: Sink/Source Max current: 0.5A (for Sink type), 0.3A (for Source type) Propagation delay: 10 $\mu$ s Max. frequency: 100 kHz Functionality: alarm, in-position, event (PEG), and others
Bi-directional differential I/Os	Hardware: Differential RS422 Termination: 120 $\Omega$ Propagation delay: 100 ns Max. frequency: 5 MHz Direction: Input or output, set by Agito PCSuite Functionality: Any differential input or output functionality. Bi-dir differential output voltage: 2.3 VDC
Analog inputs	Operational voltage: $\pm$ 12V Resolution: 12-bit or 16-bit
Analog outputs	Operational voltage: $\pm$ 12V Resolution: 16-bit
Safety inputs	2 independent inputs Voltage: 5–28 VDC
Static brake output	Operational voltage: 24V Maximum current: 3A

## Product Description

### Mechanical Specifications

Feature	Specification
Unit dimensions (max)	H=57 mm, W=188 mm, D=105 mm
Package dimensions	H=70 mm, W=235 mm, D =145 mm
Unit weight	0.4 kg
Shipping weight	0.5 kg

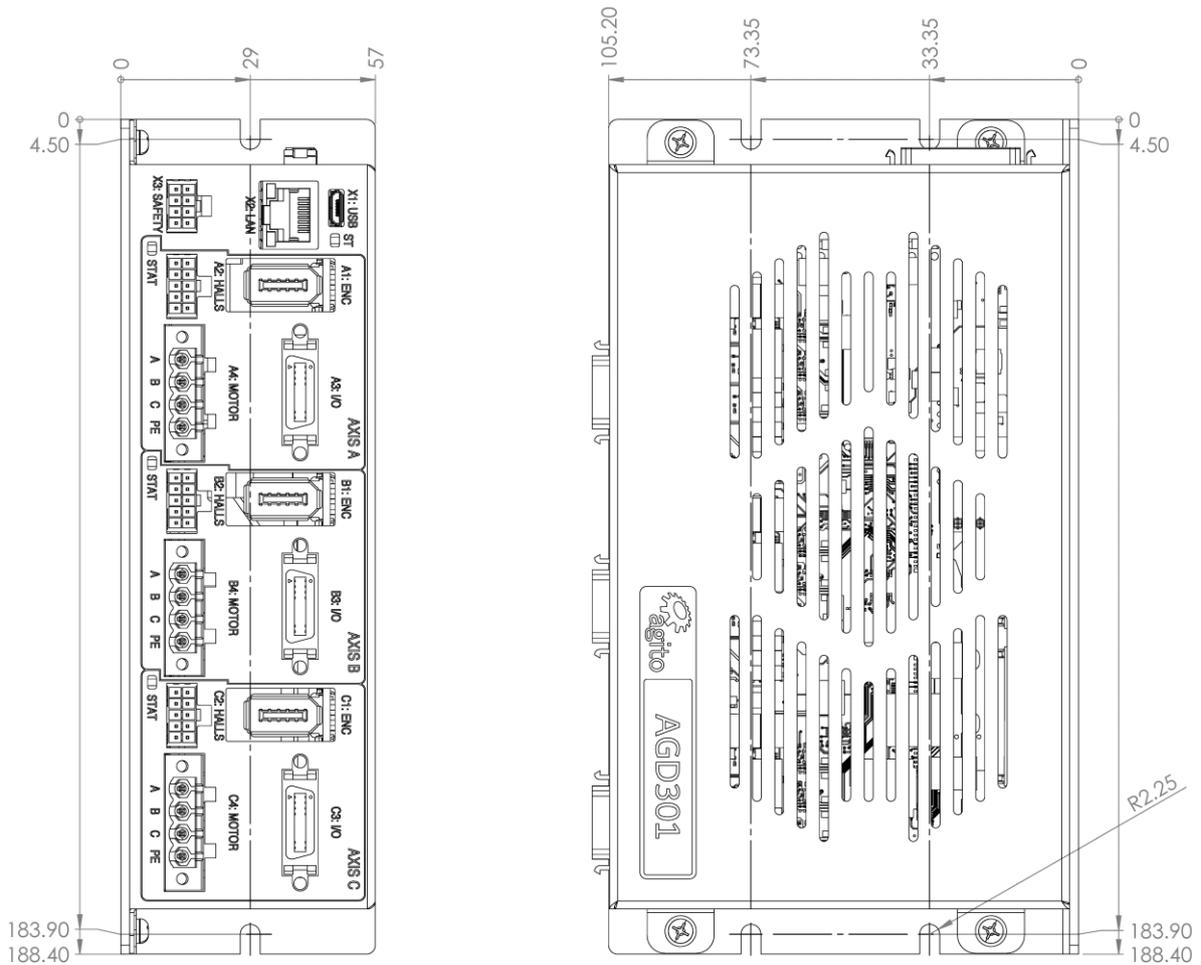


Figure 3. Product Dimensions (mm)

## 1.5 Motion Control Specifications

### Motion Control Specification

Feature	Specification
Key Features	<ul style="list-style-type: none"> <li>Encoder error mapping: 1D, 2D or 3D</li> <li>Auto-loop shaping (auto-tuning)</li> <li>Frequency domain system identification and modeling</li> <li>Flexible gain scheduling based on motion conditions</li> <li>Position lock and event</li> <li>Advanced Auto-tuning algorithm in frequency domain</li> <li>Force control and mode switching</li> </ul>
Advanced Features	<ul style="list-style-type: none"> <li>Ultra Precision mode (UPM)</li> <li>Input-shaping</li> <li>Profile-shaping</li> <li>Machine vibration control with external sensor</li> <li>Spring and friction compensation</li> <li>Active-yaw gantry control</li> </ul>
Control Sampling Rate	16 kHz (profiler, position, velocity, optional force, current)
Motion Modes	<ul style="list-style-type: none"> <li>Point-to-point</li> <li>Repetitive</li> <li>CNC sequential contour (G-codes)</li> <li>Vector and tracking motion modes</li> <li>Jog</li> <li>ECAM</li> <li>Gearing</li> <li>Joystick</li> <li>Handwheel</li> <li>Pulse and direction</li> </ul>
Operational Modes	<ul style="list-style-type: none"> <li>Position</li> <li>Velocity</li> <li>Force</li> <li>Current (torque) modes</li> </ul>
Motion Modes Switching	Motion parameters, such as speed, acceleration, deceleration, and target position can be all modified on-the-fly
Programming Interfaces	<ul style="list-style-type: none"> <li>Standalone user programs</li> <li>Multi-threaded with priority setting environment, up to 8 threads</li> <li>Execution time: 50 low script commands in 1 millisecond</li> <li>High level C-language-like script programming language integrated in Agito PCSuite</li> </ul>

Feature	Specification
IDE and Host Interfaces	Windows PC Suite IDE and configuration software Windows .NET API available in NuGet package manager Linux .NET API The API can also be used in MATLAB, LabVIEW, and other environments compatible with Windows .NET Standard TCP/IP communication ASCII string commands or binary CAN format

## 1.6 Environmental Specifications

### Environmental Specifications

Feature	Specification
Operating temperature	0°C to 50°C
Storage temperature	-20°C to 70°C
Operating humidity	< 90%
Storage humidity	< 40%
Pollution degree	2
Vibration	1G @ 150 Hz according to IEC 60068-2-6
Operating conditions	Protection class: IP20

## 2 Safety

### 2.1 Safety Symbols

Safety symbols indicate a potential for personal injury or equipment damage if the prescribed precautions and safe operating practices are not followed.

The following safety symbols are used in the product documentation.

#### Safety Symbols

Symbol	Meaning	Description
	Hazardous voltage	Indicates hazards arising from dangerous voltages.
	Earthing PE (protective earth)	Identifies any terminal which is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth (ground) electrode.
	Caution, hot surface	Indicates the marked item can be hot and should not be touched without taking care.

### 2.2 Safety Guidelines

To achieve optimum and safe operation of the product, it is important to follow the safety procedures specified in this manual.

Only qualified personnel may install, maintain, or repair the product. Before starting installation, maintenance or operation, ensure that all system components are connected to protective earth ground (PE).

The PE wire must be colored green-yellow, in accordance with local electrical wiring standards.

This product contains electrostatic-sensitive components. Proper handling procedures must be observed to avoid damage to the product.

To avoid electric arcing and hazards, never connect or disconnect any connector while the power source is on.

The maximum power supply voltage connected to the product must comply with the ratings provided in this manual.

Always disconnect the power cables before servicing the product.

Pay attention to safety symbols on the product or in the manual. Follow proper safety precautions when installing or operating the product.



#### Attention

All power connectors must be securely tightened before any operation.



#### Attention

Do not attempt to hinder or override the product's or system's fault detection or protection circuits. You must determine the cause of a fault and correct it before you attempt to operate the system. Failure to correct the fault could result in personal injury and/or damage to equipment.



**Warning**

Connectors A4, B4, C4, X5, X7 and X10 are high power. Do not touch these connectors when the product is powered.



**Warning**

Capacitors on the DC bus can retain hazardous voltages after input power has been removed. In general, it is not recommended to touch or plug in/out connectors when unit is powered.

## 2.3 Compliance

### Standards Compliance

Directive	Standard
2014/35/EU EC Machinery Low Voltage Directive	IEC 61800-5-1:2007/A1:2017
2014/30/EU Electromagnetic Compatibility Directive (EMC)	IEC 61800-3-2017
RoHS 2011/65/EU + (EU)2015/863	EN 50581:2012

This product is intended to operate in a machine or equivalent end-product. The machine or end-product must comply with any necessary safety standard as typically required for the same type of machine or end-product. It is the responsibility of the machine or end-product manufacturer to ensure the final machine or end-product meets the requirement of any safety and EMC regulations.

File name: EU Declaration of Conformity - AGD301\_v1.3.docx  
 Date: October 25, 2021  
 Version: 1.3

## EU Declaration of Conformity

**Product:** AGD301: 3-axis controller with integrated servo amplifiers

P/N:	Description
AGD301-ET-2D05	3-axis Drive - 90Vdc, 5.6 Arms continuous current
AGD301-ET-2D09	3-axis Drive - 90Vdc, 9.1 Arms continuous current

**Name and address of manufacturer:**

Agito Akribis Systems Ltd. 6 Yad-Harutsim St., P.O.Box 7172,  
 Kfar-Saba 4464103, Israel  
 Tel: +972-9-8909797 Fax: +972-9-8909796

This declaration is declared under the sole responsibility of the manufacturer

The products mentioned above are in accordance with EC Low Voltage Directive 2014/35/EU and EU Electromagnetic Compatibility Directive (2014/30/EU),

Conformity of the products designated above is under the following IEC standards:

Directive	Standard
<b>2014/35/EU</b> EC Machinery Low Voltage Directive	<b>IEC 61800-5-1:2007/A1:2017</b>
<b>2014/30/EU</b> Electromagnetic Compatibility Directive (EMC)	<b>IEC 61800-3:2017</b>
<b>RoHS 2011/65/EU + (EU)2015/863</b>	<b>EN 50581:2012</b>

Certification body: TUV Rheinland  
 Low Voltage Directive test report # NN2061A3 002  
 EMC Directive test report # NN2061A3 002

**Signed for and on behalf of the above-named manufacturer**

Place and date of issue: Israel 25 Oct 2021  
 Name, function: Eyal Sapir Managing Director  
 Signature:



AGITO-AKRIBIS SYSTEMS LTD  
514498047

## 3 Installation

---

### 3.1 Unpacking and Packing

---

Save the original box and packing materials in case you need to pack and return the product to the manufacturer.

To unpack the product:

1. Carefully remove the product from the box and the packing materials.
2. Visually inspect the product to ensure that there is no damage. If any damage has occurred, report it immediately to the carrier that delivered the package.
3. After unpacking, locate the part number label on the product, and make sure it matches the product you ordered, and that the voltage meets your specific requirements.

### 3.2 Mounting

---



#### Warning – Metal Base Plate for Heat Dissipation

---

The product is supplied with the mounting plate built into the heatsink. At full power operation, the heat sink can be quite warm, around 50°C. It is recommended to mount the product on a large metal panel to help dissipate the heat generated in the product.

#### 3.2.1 Mounting the AGD301

---

The AGD301 includes 6 slots for mounting the unit, as shown in Figure 4. The unit can be mounted using either the 2 side slots or the 4 bottom slots.

The AGD301 is mounted using M4 screws. It is important to mount the product on metal panel for both grounding and secure connections.

The heatsink of the AGD301 is electrically conductive and serves as the protective earth (PE) ground of the product. However, it is critical to ensure the PE screws are electrically conducting between the PE of AGD301 and the PE of main power supply in the system.

All cables connected to the product must be securely constrained to avoid vibration that causes stress concentration at the cables or connectors which may result in breakage of electrical conductivity.

## Installation

### 3.2.2 Mounting Multiple Motion Controllers

When mounting multiple units within a cabinet, clearance between units must be at least 5 mm for vertical mounting and 70mm for horizontal mounting. In addition, top and bottom clearance must be at least 60 mm.

Ambient temperature in the cabinet must not exceed 50°C

If controllers are mounted on a backplane, the backplane temperature must not exceed the 50°C.

It is recommended to install a cooling fan at the bottom of the cabinet for best circulation.

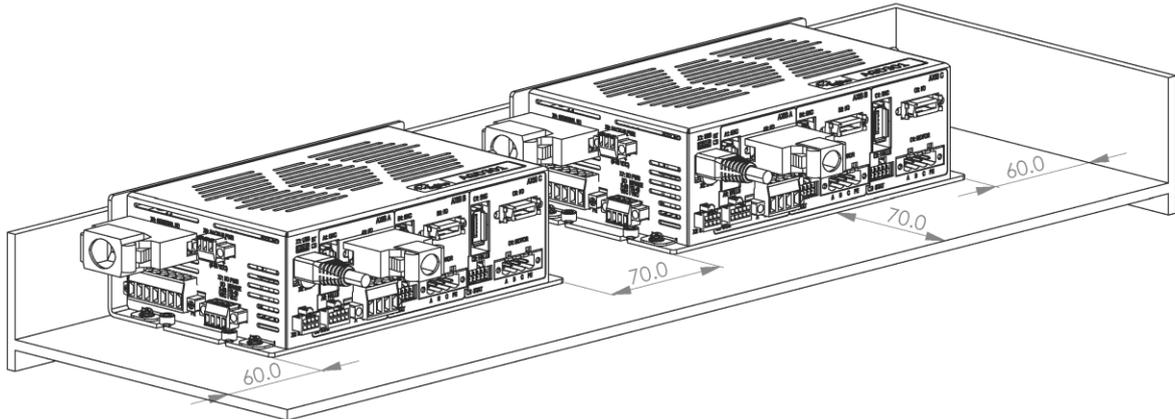


Figure 4. Horizontal Mounting Multiple Amplifiers within Cabinet (mm)

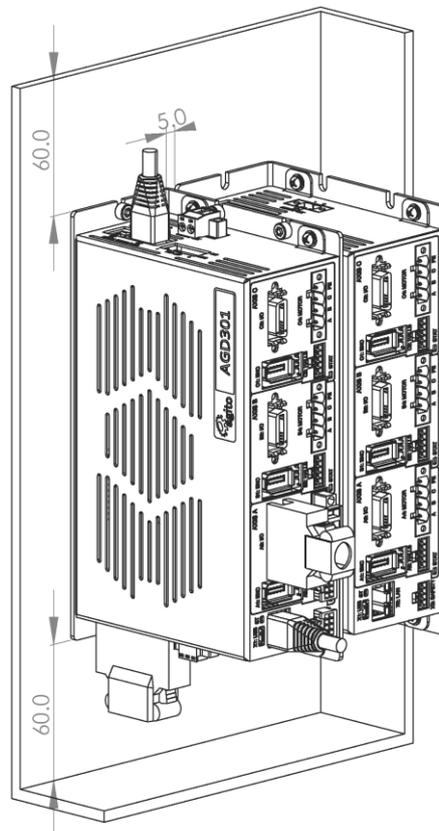


Figure 5. Vertical Mounting Multiple Amplifiers within Cabinet (mm)

### 3.3 Electrical Installation

---

#### 3.3.1 Power Wiring

---

AGD301 is designed to operate on voltage ranging from 12 VDC to 90 VDC, which is supplied to bus voltage, to motor, and to logic power.

#### 3.3.2 Regeneration

---

AGD301 uses the main DC power input to output a controlled electrical power through the phases of the motor. The motor converts this electrical power to a mechanical power that moves the load. During motor deceleration and stopping, the inertia of the load drives the movement of the motor, not the servo drive. Due to back EMF, the motor acts as a generator and returns energy to the DC bus supply, which causes the DC bus voltage to increase to undesirable level.

Maximum allowable DC bus voltage is 90 VDC. To prevent excessive DC bus voltage, a regeneration resistor can be connected to the AGD301 X10 connector to dissipate excess regenerated energy, and prevent it from reaching undesirable levels. The regeneration resistor starts to dissipate energy when actual bus voltage reaches threshold defined by RegenOn parameter. Regeneration voltage threshold parameters are software configurable and can be modified according to the motor's maximum voltage specification.

AGD301 controllers have one regeneration resistor input for both axes. Regeneration power of two motors must be taken into consideration when selecting the resistor.



#### Warning

---

DC Vbus is monitored, and motors will be disabled if voltage is too high. However, there is no protection against the connection of an excessive voltage power supply that will damage the product.

For connection details, refer to the section *Interface X10: Regeneration*.

#### Important Notes

The regeneration feature, once enabled, is always active, regardless of the motor status (enabled/disabled).

Current will flow in the regeneration resistor depending on the values of RegenOn and RegenOff, and the power supply voltage.

There are no current or power protections to protect the regeneration resistor or the internal MOSFET.

Be sure to set the suitable regeneration parameters for the supply voltage and the external regeneration resistor.

Plug in the regeneration resistor only after all parameters are set properly, and always when the controller power is off.

Let the regeneration resistor cool down before touching it. Unplug it only when the controller power is off.

During development, if the supply voltage is to be modified, first disconnect the regeneration resistor and, before reconnecting the regeneration resistor, be sure to adjust the regeneration parameters to match the new supply voltage.

We recommend adding external protections (such as PTC) to protect the regeneration resistor.

### 3.3.3 Safe Operating Area

---

While each specific maximal rating can be safely used, the product cannot support certain combinations of these maximal ratings. For example, the product will not enable operation under the following **combined** maximal ratings usage continuously over long-term period:

Three axes at  $5.6A_{rms}$  continuous each, at 90% PWM duty cycle

1.5A external load on the 5V supply

Product mounted horizontally and not attached to a suitable base plate

50°C ambient temperature.

Permitted combinations, as well as forbidden combinations, cannot be specifically provided since they are a function of multiple conditions, such as continuous current of all three axes, bus voltage, PWM duty cycle of all three motors, 5V consumption, I/O's high current usage, base plate size, product mounting orientation, and ambient temperature.

The SOA of the product is defined as any combination of operational conditions (each within the absolute maximal ratings defined in the Technical Specifications) and assembly options that lead to internal product temperature below 75°C.

The product includes a built-in temperature sensor. Its internal temperature is reported via the status parameter BoardTemp. When BoardTemp reaches 75°C, all motors will be disabled and errors will be reported. A motor-enable request will create an error if BoardTemp is higher than 75°C.

The following figures are examples of safe operating cases. The SOA charts assume 90% duty cycle on PWM output continuously; that is, motors are moving at the maximum speed allowed by the bus voltage.



#### Attention

---

Each of the power/voltage/current absolute maximal ratings is valid over the overall operating temperature range, subject to the safe operating area (SOA).



#### Attention

---

Operating (or storing) the product contrary to the defined absolute maximal ratings is not allowed and will damage the product.

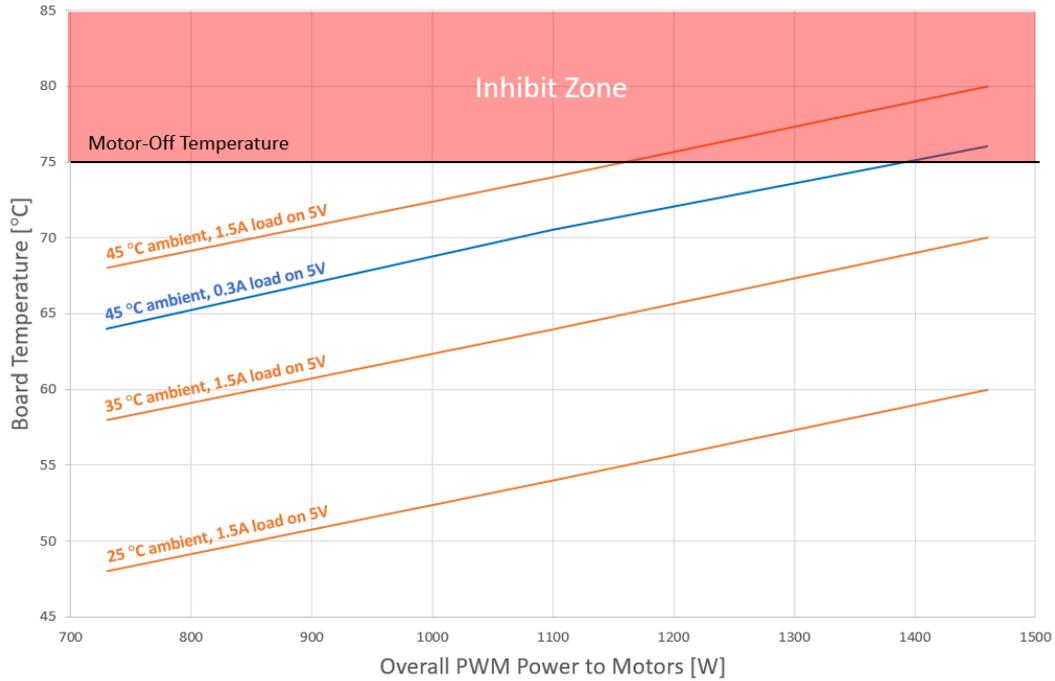


Figure 6. AGD301-ET-2D05 Safe Operating Area (SOA) @90 VDC

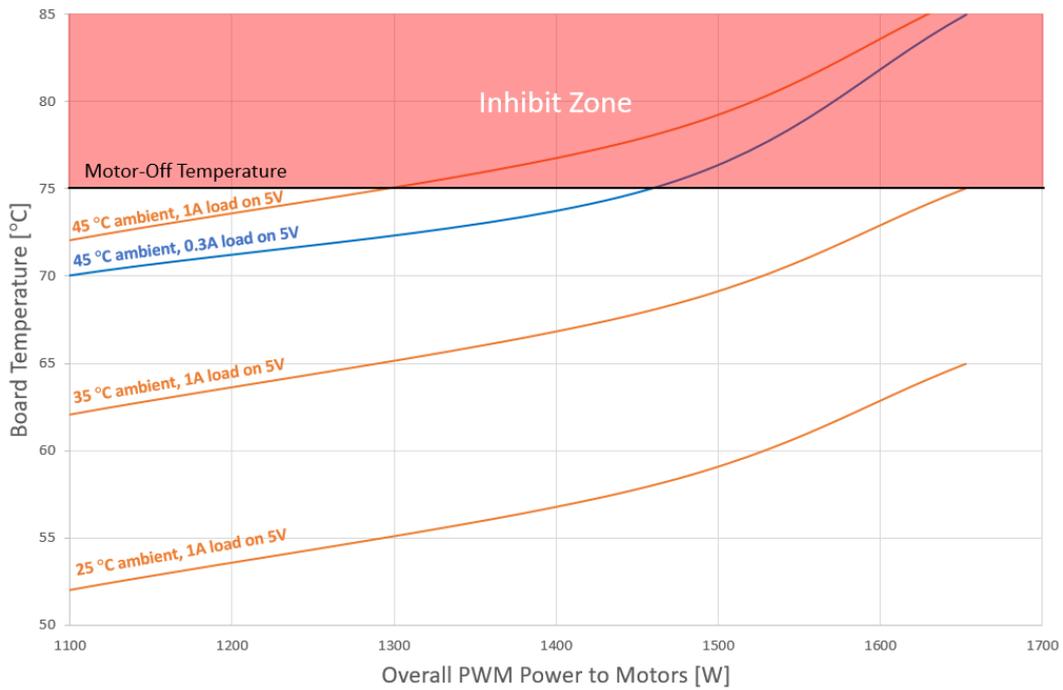


Figure 7. AGD301-ET-2D09 Safe Operating Area (SOA) @90 VDC



PWM power

Overall PWM power to motors is the sum of PWM power to all three motors.

$$PWM\ power = 0.95 \times Main\_Power\_Supply\_Voltage\ [V] \times Motor\_Continuous\_Current\ [Arms]$$

This formula assumes 90% PWM duty cycle.

## Installation

### 3.3.4 Grounding

It is recommended to install the AGD301 on a metal plate for better power dissipation, reduced EMI, and grounding connection. Make sure the plate is not painted.

The heatsink of the AGD301 is electrically conductive and serves as the protective earth (PE) ground of the product. However, it is critical to ensure the PE screws are electrically conducting between the chassis connection screw of AGD301 and the PE of main power supply in the system.

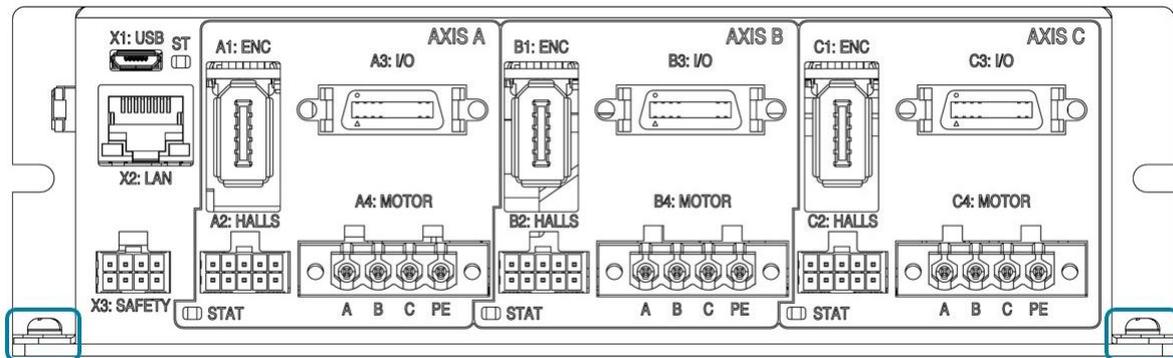


Figure 8. Chassis Connection Screws

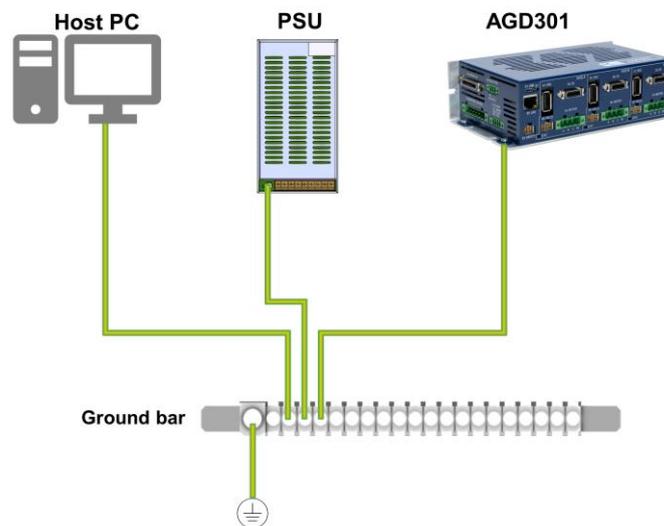


Figure 9. System Grounding

## Installation

### Ground Domains

The following table shows the ground domains in the AGD301 system:

**GND.** Reference voltage for digital/analog circuits and signals.

**PGND.** High voltage ground domain (internal).

**General.** Usually at DC potential close to GND but not connected internally.

#### Ground Domains

Name	Ground Domain	Notes
DC power input	GND (digital ground)	External DC power supply
Isolated digital inputs/outputs	General	Isolated
Differential inputs/outputs	GND	Not isolated. To controller/PLC.
Analog inputs/outputs	GND	Not isolated
Brake control output	General	Isolated. External DC power supply.
Regeneration output	PGND	
Ethernet communication	General	Isolated
Other communication	GND	Not isolated (unless otherwise stated in manual).

### Grounding Policy

Grounding of the product must comply with the following guidelines:

The enclosures and other external parts that may be touched by the user must be in the safe domain.

The AGD301 must be connected to protective earth (PE) and connected to the building's ground. PE is protected with an earth-leakage circuit breaker (ELCB); hence it is safe to touch. Refer to Figure 9.

PGND is connected directly to mains wires, hence it is just as dangerous as mains to the user.

All shielded cables, including but not limited to motor, encoders, and power input, have their shield connected to PE as part of the external metal enclosure.

It is critical to avoid ground loops in the system. A ground loop allows currents to return by two or more different paths, causing electromagnetic interference or even damage to wires.

The system designer must carefully examine all GND connections in the system to ensure that no loops are created, and that all GND-referenced signals have a GND wire nearby (for both return currents and common mode voltage).

### 3.4 Electrical Interfaces

This section provides a detailed description of all the power and signal interfaces of the product.

#### 3.4.1 Interface X5: Main Power

Connector X5 (MAIN PWR) is used to supply 12–90 VDC to the AGD301.

The input voltage is directly connected to the amplifier power bridge, to drive the motors. In addition, it is used to generate internal logic power to the controller board and to external devices such as encoders and I/Os.

The AGD301 is fully operational with this single power supply.

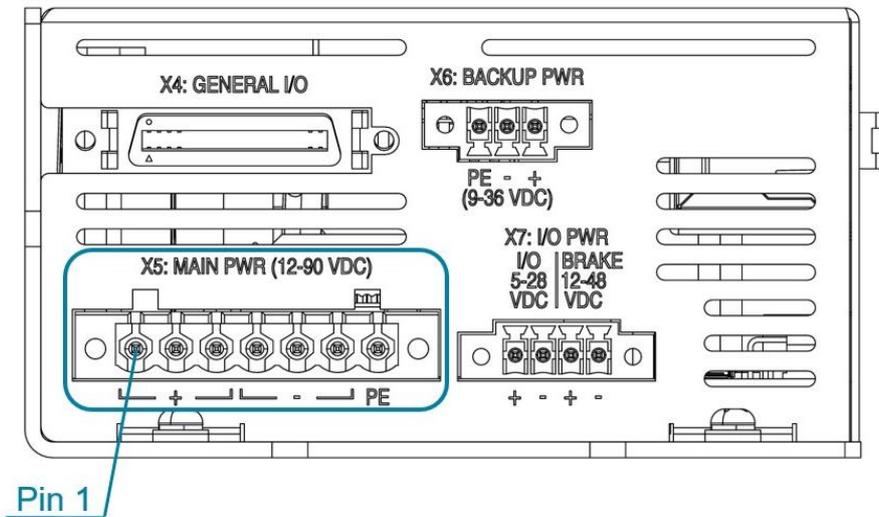


Figure 10. Main Power Connector

#### Connector X5: MAIN PWR

Pin #	Name	Description
1	Vbus	Main power input: 12V to 90V
2	Vbus	Main power input: 12V to 90V
3	Vbus	Main power input: 12V to 90V
4	Vbus Return	Power GND
5	Vbus Return	Power GND
6	Vbus Return	Power GND
7	PE	Protective earth

Mating connector options	Degson 2EDGKM-5.08-07P-14-00A Phoenix Contact 1778030
Pitch	5.08 mm
Wiring	AWG 12–16, insulation rated for 300 V

## Installation



### Warning – Common Vbus Power

Pins 1, 2 and 3 are connected to a common Vbus. The same voltage must be connected to each pin. 3 pins are provided to split the current load on the connector.



### Warning - Hot plugging is not supported!

Plug or unplug the power connector only when power is off. Plugging in the power connector when power is on may cause power surges through connected devices and possibly damage them.



### Optional schemes for isolated power supplies

The AGD301 can support fully isolated power supplies, one for the power circuitry to drive the motor, and one for the digital logic. If you are interested in such a scheme, contact Technical Support.



### Attention – Reverse polarity protection

AGD301 includes reverse polarity protection to prevent damage if polarity is inverted at the power input.

## 3.4.2 Interface X6: Backup Power

Connector X6 (BACKUP PW) provides optional backup (9–36 VDC) power for the logic components and enables communication with the controller when interface X5: MAIN PWR is disconnected.

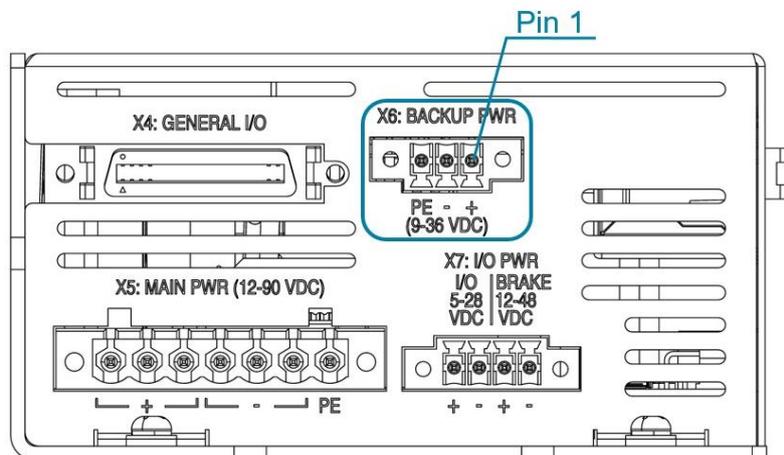


Figure 11. Backup Power Connector

### Connector X6: BACKUP PWR

Pin #	Name	Description
1	Backup/Logic Power	9–36 VDC – backup/logic power, up to 50W
2	Backup Power GND	Ground – backup/logic power return
3	PE	Protective earth

Mating connector options	Degson	15EDGKM-3.5-03P-14-00A
	Phoenix Contact	1847068

## Installation

Pitch	3.5 mm
Wiring	16–20 AWG, insulation rated for 300V

### 3.4.3 Interface X7: I/O and Brake Power

Connector X7 (I/O PWR) allows users to provide DC power supply to the isolated I/Os and motor brake. Typically, the isolated I/Os use 28 VDC. The I/O power is connected internally to each I/O port to allow users to tap this power supply easily within the same connector.

The brake power supports up to 48 VDC. This power is connected internally to the brake output port.

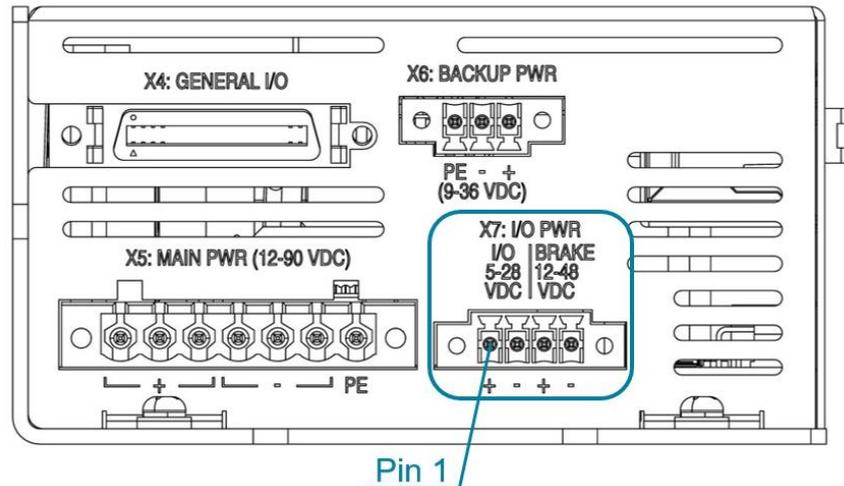


Figure 12. I/O and Brake Power Connector

#### Connector X7: I/O PWR

Pin #	Name	Description
1	I/O Power	5 to 28 VDC – User supplied I/O power input, up to 2A
2	I/O Power Return	Ground – I/O power return
3	VBrake	12 to 48 VDC – Brake power input, up to 70W
4	VBrake Return	Ground – Brake power return

Mating connector options	Degson 15EDGKM-3.5-04P-14-00A Phoenix Contact 1847071
Pitch	3.5 mm
Wiring	AWG 16–20, insulation rated for 100 V



#### Warning - Hot plugging is not supported!

Plug or unplug the power connector only when power is off. Plugging in the power connector when power is on may cause power surges through connected devices and possibly damage them.

## Installation

### 3.4.4 Interfaces A4, B4, C4: Motors

Connectors A4, B4, and C4 (MOTOR) are used to connect to the motor phases of Axes A, B, and C, respectively. The AGD301 supports any combination of 3-phase brushless motors, 1-phase brushed motors, and voice coil motors.

Be sure to follow the wiring specifications for each motor.

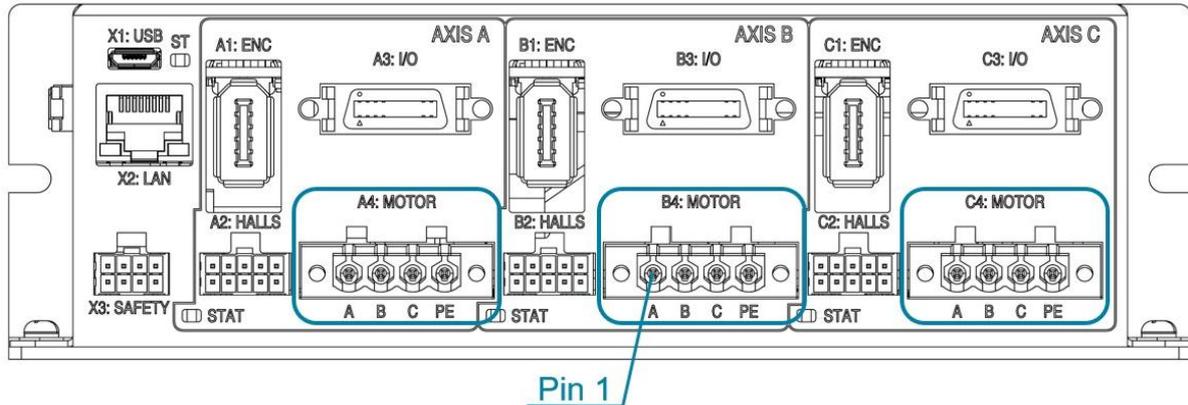


Figure 13. Motor Power Connector

#### Connectors A4, B4 and C4: MOTOR

Pin #	Label	Brushless Motor	Brushed or Voice Coil Motor
1	A	Motor phase A / M1	Motor phase + / Phase A / M1
2	B	Motor phase C / M2	Motor phase - / Phase B / M2
3	C	Motor phase C / M3	Not connected
4	PE	Protective earth (motor power cable shield)	Protective earth (motor power cable shield)

Mating connector options	Degson 2EDGKM-5.08-04P-14-00A Phoenix Contact 1778001
Pitch	5.08 mm
Wiring	14–20 AWG, insulation rated for 300 V

## Installation

### 3.4.5 Interface X3: Safety

Connector X3 (SAFETY) is used for the hardware safety function that disables power to the motor.

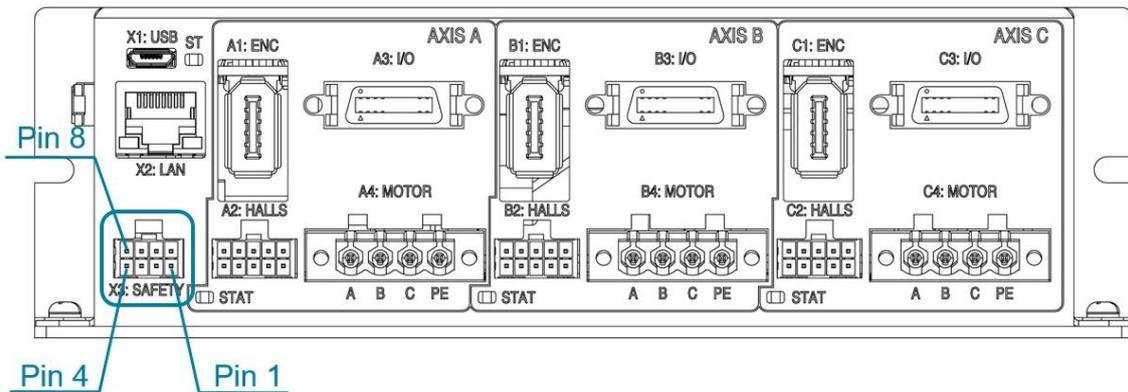


Figure 14. Safety Connector

#### Connector X3: SAFETY

Pin #	Name	Description
1	5V	5V supply for safety circuits
2	Feedback -	Safety Feedback negative (emitter) output
3	Safety 2 -	Safety Input 2 negative input
4	Safety 1 -	Safety Input 1 negative input
5	GND	GND
6	Feedback +	Safety Feedback positive (collector) output
7	Safety 2 +	Safety Input 2 positive input
8	Safety 1 +	Safety Input 1 positive input

Mating connector options	Samtec	IPD1-04-D-K and CC79L-2630-01-L
Wiring	26 AWG, insulation rated for 100 V	

- The safety circuitry consists of two input channels, labeled Safety 1 and Safety 2. Both input channels support a voltage range of 5 VDC to 24 VDC. It is recommended to use 24 VDC for the input voltage as it provides better electromagnetic interference (EMI) immunity.
- Safety 1 and Safety 2 function independently, thus providing safety redundancy. Each one can disable the power to the motor.
- Both Safety 1 and Safety 2 disable the power to the motor through hardware circuitry, without any software intervention.
- Both Safety 1 and Safety 2 are defined with a positive pin (+) and a negative pin (-). However, the opto-coupler at the Safety Input has two input diodes, which enable operation at “positive” or “negative” input voltage. The input is activated when current is sufficient at one of the input diodes, regardless of the current direction. This enables NPN or PNP connection to the safety inputs.
- The Safety Input protection logic is designed so that both Safety Inputs must be powered to enable motor operation. Leaving a Safety Input disconnected prevents motor operation. This logic is required to ensure that a disconnected safety cable is considered an unsafe condition by the control

## Installation

unit. When sufficient current is driven through a Safety Input, the state of this input is Safe. When insufficient current is driven through a Safety Input, the state of this input is Unsafe.

- The two Safety Inputs must be in the Safe state to enable motor operation.
- Both Safety 1 and Safety 2, although acting on the drive hardware directly, are also monitored by the controller software. The controller software generates a feedback signal to the user (Feedback), which is also an isolated signal. This feedback is generated by the software and is activated if at least one of Safety 1 or Safety 2 signals is in the Unsafe state.
- The electrical characteristics of the Safety 1 and Safety 2 are identical to those of all other isolated digital inputs of the controller.
- The safety inputs implemented in the product are currently pending certification Functional Safety Standards.



### Disabling Safety function

If the Safety function is not required in your application, you can disable it by using a bypass plug from Agito. Part number: C-AGD301-SFT

## Safety Connection Diagram Example

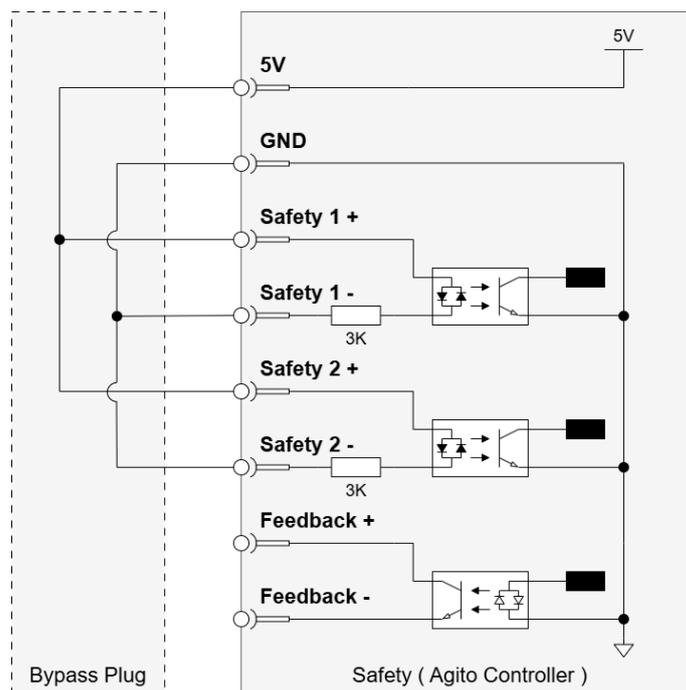


Figure 15. Safety Bypass

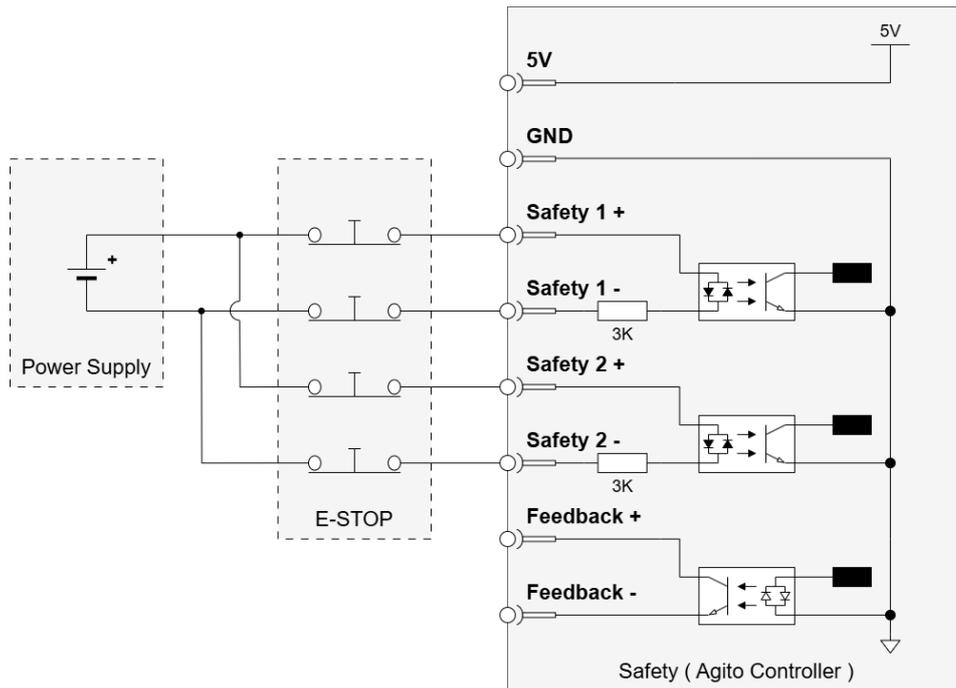


Figure 16. Safety with E-STOP

## Installation

### 3.4.6 Interface X10: Regeneration

Connector X10 (REGEN) is used to connect an external power resistor to dissipate energy generated by the motor, typically during deceleration. The motor-generated energy will charge up the internal capacitor. When the internal capacitor is fully charged, the bus voltage will increase. When bus voltage is higher than the operating limit of the product, it will trigger over-voltage protection and disable the motor. To prevent this from happening, users can connect an external power resistor to dissipate the unwanted energy.

Refer to the section *Regeneration* for more information about Regeneration.

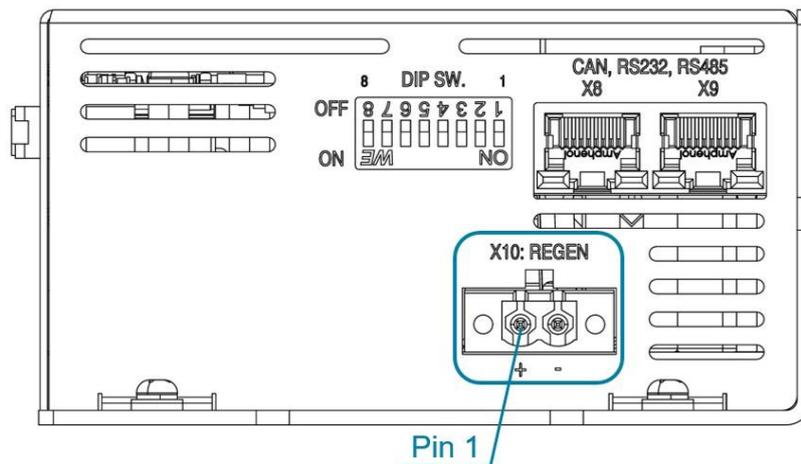


Figure 17. Regeneration Connector

#### Connector X10: REGEN

Pin #	Name	Description
1	Vbus+	The internal Vbus power (internally connected to Vbus on connector PWR).
2	Regeneration	Regeneration pin to be connected to an external regeneration resistor. Limited to 16A. The external regeneration resistor should be connected between this pin (pin 2) and the Internal DC Bus pin (pin 1).

Mating connector options	Degson 2EDGKM-5.08-02P-14-00A Phoenix Contact 1777989
Pitch	5.08 mm
Wiring	14–16 AWG, insulation rated for 300 V

## Installation

### 3.4.7 Interfaces A1, B1, C1: Encoders

Connectors A1, B1, and C1 (ENC) are identical, and have the same pinouts. Each one serves as an interface to a single encoder.

Each encoder port supports various encoder types: digital quadrature incremental encoders (AqB), analog sin/cos incremental encoders, absolute BiSS-C encoders, and absolute EnDat2.2 encoders. The type of encoder connected to the AGD301 is configured in the Agito PCSuite software.

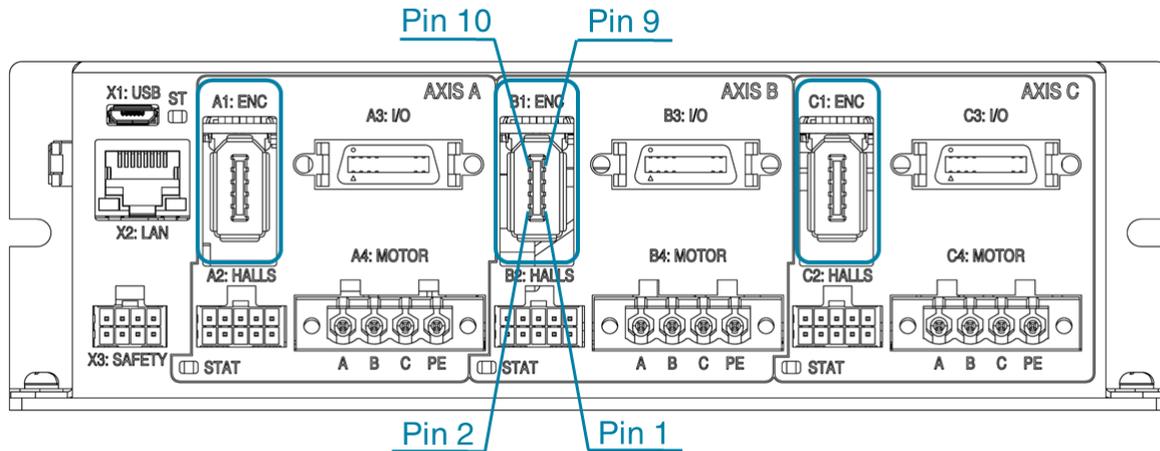


Figure 18. Encoder Connector

#### Connector A1, B1 and C1: ENC (AXIS A, B and C)

Pin #	Name	Encoder Types				Description
		AqB	Sin/Cos	BiSS-C	EnDat 2.2	
1	5V					5V power supply (limited to 0.5A per connector)
2	GND					5V return and reference for differential signals
3	Encoder_1+			CLOCK+	CLOCK+	Clock+ pin for absolute encoders
4	Encoder_1-			CLOCK-	CLOCK-	Clock- pin for absolute encoders
5	Encoder_2+	A+	SIN+			A+ (for AqB) or sin+ (for analog sin/cos)
6	Encoder_2-	A-	SIN-			A- (for AqB) or sin- (for analog sin/cos)
7	Encoder_3+	B+	COS+			B+ (for AqB) or cos+ (for analog sin/cos)
8	Encoder_3-	B-	COS-			B- (for AqB) or cos- (for analog sin/cos)
9	Encoder_4+	Z+	Z+	DATA+	DATA+	Data+ for absolute encoders, or Z+ for both AqB and analog sin/cos encoder
10	Encoder_4-	Z-	Z-	DATA-	DATA-	Data- for absolute encoders, or Z- for both AqB and analog sin/cos encoder

Mating connector options	Sunchu 3M	SC-10-4P 36210-0100PL and 36310-3200-008
Wiring	AWG 26, insulation rated for 100 V	

## Installation



### Note – Incremental encoder interface details

By default, the product does not support single-ended encoder. For use of single-ended encoder, contact Technical Support.



### Note – 5V supply limitation

The 5V supply provided at pin 1 of each ENC connector is internally limited to 0.5A per connector. The maximum total current provided by all the 5V pins in the product is limited to 1.5A.

## 3.4.8 Interfaces A2, B2, C2: Hall Sensor and Static Brake

Connectors A2, B2, and C2 (HALLS), one for each axis, have identical pinouts. Each port provides 3 Hall sensor inputs. In addition, each connector includes 1 RTD input for resistance temperature detection (typically for motor temperature), and 1 digital output for static braking.

Additional I/Os are available on interfaces A3, B3, C3 (Digital and Analog I/Os), and on interface X4 (General I/Os)

For schematics and more information about these interfaces, refer to the section *Hall Sensor and Brake Connection Diagram Example*.

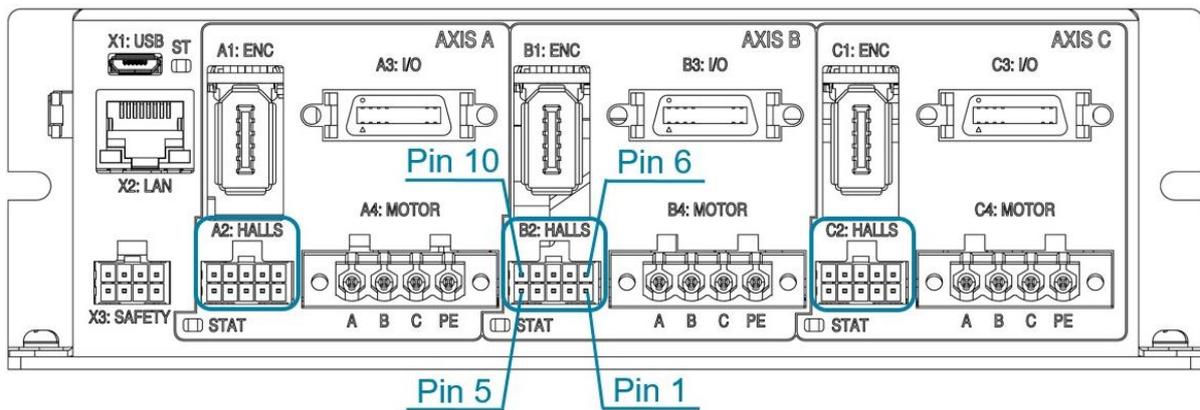


Figure 19. Hall Sensor and Brake Connector

**Connector A2: HALLS (Axis A)**

Pin #	Name	Software Representation	Description
1	Brake -		Static brake output, sinking up to 3A
2	Brake +		Brake power supply, connected internally to X7: I/O PWR Connector Pin 3 (VBrake)
3	Digital Input 19 (Hall A)	DInPort.bit(18)	Isolated digital input 19   Hall A signal. To use Hall input, go to the Agito PCSuite Digital Input page, and configure input 18 as Hall A. The following inputs (20 and 21) will be set automatically as Hall B and Hall C. Isolated digital input common (19 to 21) connected to 5V internally.
4	Digital Input 20 (Hall B)	DInPort.bit(19)	Isolated digital input 20   Hall B signal.
5	Digital Input 21 (Hall C)	DInPort.bit(20)	Isolated digital input 21   Hall C signal.
6	5V		5V power supply for Hall sensor
7	GND		GND for 5V
8	Temp+	AMotorTemp	PT100+ /Thermostat+
9	Temp-		PT100- /Thermostat-
10	PE		Protective earth

**Connector B2: HALLS (Axis B)**

Pin #	Name	Software Representation	Description
1	Brake -		Static brake output, sinking up to 3A
2	Brake +		Brake power supply, connected internally to X7: I/O PWR Connector Pin 3 (VBrake)
3	Digital Input 22 (Hall A)	DInPort.bit(21)	Isolated digital input 22   Hall A signal. To use Hall input, go to the Agito PCSuite Digital Input page, and configure input 21 as Hall A. The following inputs (23 and 24) will be set automatically as Hall B and Hall C. Isolated digital input common (22 to 24) connected to 5V internally.
4	Digital Input 23 (Hall B)	DInPort.bit(22)	Isolated digital input 23   Hall B signal.
5	Digital Input 24 (Hall C)	DInPort.bit(23)	Isolated digital input 24   Hall C signal.
6	5V		5V power supply for Hall sensor
7	GND		GND for 5V
8	Temp+	BMotorTemp	PT100+ /Thermostat+
9	Temp-		PT100- /Thermostat-
10	PE		Protective earth

## Installation

### Connector C2: HALLS (Axis C)

Pin #	Name	Software Representation	Description
1	Brake -		Static brake output, sinking up to 3A
2	Brake +		Brake power supply, connected internally to X7: I/O PWR connector pin 3 (VBrake)
3	Digital Input 25 (Hall A)	DInPort.bit(24)	Isolated digital input 25   Hall A signal. To use Hall input, go to the Agito PCSuite Digital Input page, and configure input 25 as Hall A. The following inputs (26 and 27) will be set automatically as Hall B and Hall C. Isolated digital input common (25 to 27) connected to 5V internally.
4	Digital Input 26 (Hall B)	DInPort.bit(25)	Isolated digital input 26   Hall B signal.
5	Digital Input 27 (Hall C)	DInPort.bit(26)	Isolated digital input 27   Hall C signal.
6	5V		5V power supply for Hall sensor
7	GND		GND for 5V
8	Temp+	BMotorTemp	PT100+ /Thermostat+
9	Temp-		PT100- /Thermostat-
10	PE		Protective earth

Mating connector options	Samtec Inc. IPD1-05-D-K and CC79L-2630-01-L
Wiring	26 AWG, insulation rated for 100V



#### Note – 5V supply limitation

The 5V supply provided at pin 6 is limited to 0.5A per connector. The maximum total current provided by all the 5V pins in the product is limited to 1.5A.

### Hall Sensor Connection Diagram Example

- Motor Hall sensor should be connected to opto-isolated digital inputs on connector A2/B2/C2 (Halls). The Hall sensor must be connected to three consecutive inputs Hall\_A, Hall\_B, Hall\_C. The first input mode must be configured to mode 23-Hall A.
- It is recommended that Hall sensors be used with incremental encoders. Typically, Hall sensors are called Ha-Hb-Hc, or Hu-Hv-Hw, or H1-H2-H3, which correspond to the motor phases. A typical Hall sensor is an open collector (NPN) type and requires a 5 VDC power supply.
- Any three consecutive digital inputs can be used as Hall sensor inputs.
- Motor Hall sensors are wired as standard digital inputs.

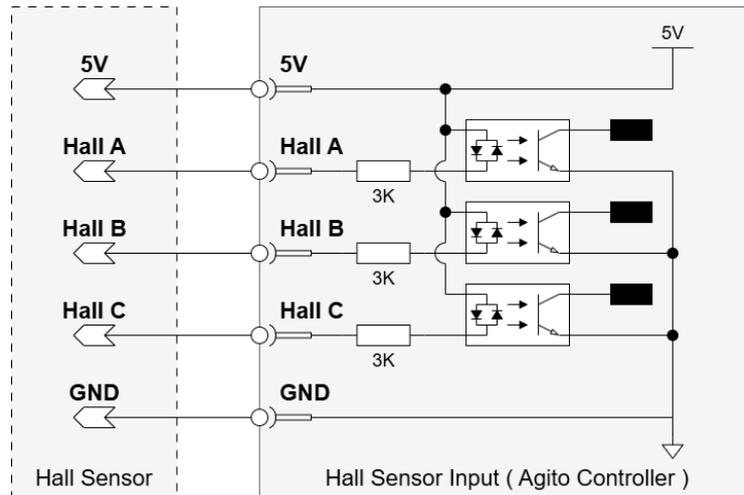


Figure 20. Hall Sensor

### Brake Connection Diagram Example

- An external 24–48 VDC power supply, connected to X7 pin 3 and pin 4, is required to provide power to the motor brake.
- Connect the Motor Brake+ wire directly to the power supply positive terminal, A2/B2/C2 pin 2 (Brake +).
- Connect the Motor Brake- wire to A2/B2/C2 pin 1 (Brake -) for motor A brake/B brake/C brake.
- AGD301 includes flyback diodes; therefore, an external diode is not required.
- Motor brake functionality can be configured in Agito PCSuite to automatic mode: Brake released on motor on, and Brake engaged on motor off.

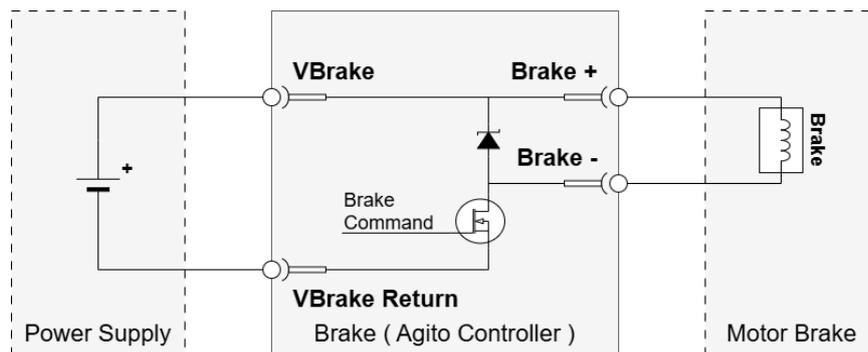


Figure 21. Brake

## Installation

### 3.4.9 Interfaces A3, B3, C3: Digital and Analog I/Os

Connectors A3, B3, and C3 (I/Os), one for each axis, each provide 6 isolated inputs, 3 isolated outputs, 1 analog output, and 1 analog input.

Additional I/Os are available on interfaces A2, B2, C2 (Halls), and on interface X4 (General I/Os)

For schematics and more information about these interfaces, refer to the section *I/O Connection Diagram Example*.

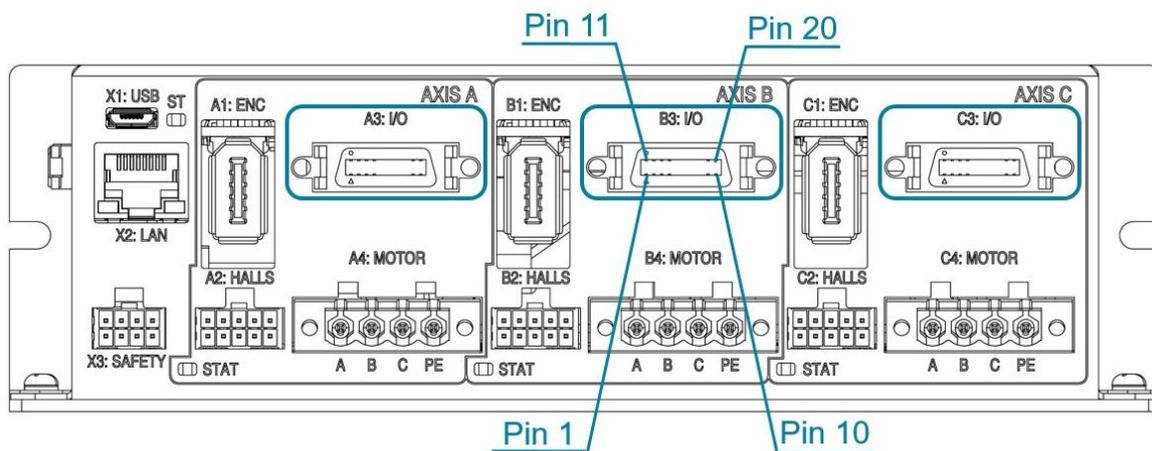


Figure 22. Axis I/O Connector



#### Note – 5V supply limitation

The 5V supply provided at pin 9 of each AXIS connector is internally limited to 0.5A per connector. The maximum total current provided by all the 5V pins in the product is limited to 1.5A.

#### Connector A3: I/O (Axis A)

Pin #	Name	Software Representation	Description
1	Digital Input 1	DInPort.bit(0)	Isolated digital input 1 (NPN or PNP, depending on the connection of the group's common pin).
2	Digital Input 3	DInPort.bit(2)	Isolated digital input 3 (NPN or PNP, depending on the connection of the group's common pin).
3	Digital Input 5	DInPort.bit(4)	Isolated digital input 5 (NPN or PNP, depending on the connection of the group's common pin).
4	Digital Output 1	DOutPort.bit(0)	Isolated digital output 1, programmable sink or source
5	Digital Output 2	DOutPort.bit(1)	Isolated digital output 2, programmable sink or source
6	Digital Output 3	DOutPort.bit(2)	Isolated digital output 3, programmable sink or source
7	Analog Input 1	AInPort[1]	±12V, 12-bit resolution.
8	Analog Input Return 1		Analog input 1 return. Must be connected to GND if analog input is single-ended.
9	5V		5V power supply, limited to 0.5A
10	GND		Ground for 5V and differential signals

Pin #	Name	Software Representation	Description
11	Digital Input Common (1 to 6)		Common pin for isolated digital inputs 1 to 6. Can be power or return, depending on external connection.
12	Digital Input 2	DInPort.bit(1)	Isolated digital input 2 (NPN or PNP, depending on the connection of the group's common pin).
13	Digital Input 4	DInPort.bit(3)	Isolated digital input 4 (NPN or PNP, depending on the connection of the group's common pin).
14	Digital Input 6	DInPort.bit(5)	Isolated digital input 6 (NPN or PNP, depending on the connection of the group's common pin).
15	Digital Output Common Power (1 to3)		Common power pin for isolated digital outputs 1 to 3.
16	Digital Output Common Return (1 to 3)		Common power return pin for isolated digital outputs 1 to 3.
17	Analog Output 1	AOutPort[1]	Analog output 1
18	GND		Ground for analog output.
19	I/O Power		Connected internally to X7: I/O PWR pin 1, I/O Power
20	I/O Power Return		Connected internally to X7: I/O PWR pin 2, I/O Power Return

**Connector B3: I/O (AXIS B)**

Pin #	Name	Software Representation	Description
1	Digital Input 7	DInPort.bit(6)	Isolated digital input 7 (NPN or PNP, depending on the connection of the group's common pin).
2	Digital Input 9	DInPort.bit(8)	Isolated digital input 9 (NPN or PNP, depending on the connection of the group's common pin).
3	Digital Input 11	DInPort.bit(10)	Isolated digital input 11 (NPN or PNP, depending on the connection of the group's common pin).
4	Digital Output 4	DOutPort.bit(3)	Isolated digital output 4, programmable sink or source
5	Digital Output 5	DOutPort.bit(4)	Isolated digital output 5, programmable sink or source
6	Digital Output 6	DOutPort.bit(5)	Isolated digital output 6, programmable sink or source
7	Analog Input 2	AInPort[2]	±12V, 12-bit resolution.
8	Analog Input Return 2		Analog input 2 return. Must be connected to GND if analog input is single-ended.
9	5V		5V power supply, limited to 0.5A
10	GND		Ground for 5V and differential signals

Pin #	Name	Software Representation	Description
11	Digital Input Common (7 to 12)		Common pin for isolated digital inputs 7 to 12. Can be power or return, depending on external connection.
12	Digital Input 8	DInPort.bit(7)	Isolated digital input 8 (NPN or PNP, depending on the connection of the group's common pin).
13	Digital Input 10	DInPort.bit(9)	Isolated digital input 10 (NPN or PNP, depending on the connection of the group's common pin).
14	Digital Input 12	DInPort.bit(11)	Isolated digital input 12 (NPN or PNP, depending on the connection of the group's common pin).
15	Digital Output Common Power (4 to 6)		Common power pin for isolated digital outputs 4 to 6.
16	Digital Output Common Return (4 to 6)		Common power return for isolated digital outputs 4 to 6.
17	Analog Output 2	AOutPort[2]	Analog output 2
18	GND		Ground for analog output
19	I/O Power		Connected internally to X7: I/O PWR pin 1, I/O Power
20	I/O Power Return		Connected internally to X7: I/O PWR pin 2, I/O Power Return

**Connector C3: I/O (AXIS C)**

Pin #	Name	Software Representation	Description
1	Digital Input 13	DInPort.bit(12)	Isolated digital input 13 (NPN or PNP, depending on the connection of the group's common pin).
2	Digital Input 15	DInPort.bit(14)	Isolated digital input 15 (NPN or PNP, depending on the connection of the group's common pin).
3	Digital Input 17	DInPort.bit(16)	Isolated digital input 17 (NPN or PNP, depending on the connection of the group's common pin).
4	Digital Output 7	DOutPort.bit(6)	Isolated digital output 7, programmable sink or source
5	Digital Output 8	DOutPort.bit(7)	Isolated digital output 8, programmable sink or source
6	Digital Output 9	DOutPort.bit(8)	Isolated digital output 9, programmable sink or source
7	Analog Input 3	AInPort[2]	±12V, 12-bit resolution.
8	Analog Input Return 3		Analog input 3 return. Must be connected to GND if analog input is single-ended.

Pin #	Name	Software Representation	Description
9	5V		5V power supply, limited to 0.5A
10	GND		Ground for 5V and differential signals
11	Digital Input Common (13 to 18)		Common pin for isolated digital inputs 13 to 18. Can be power or return, depending on external connection.
12	Digital Input 14	DInPort.bit(13)	Isolated digital input 14 (NPN or PNP, depending on the connection of the group's common pin).
13	Digital Input 16	DInPort.bit(15)	Isolated digital input 16 (NPN or PNP, depending on the connection of the group's common pin).
14	Digital Input 18	DInPort.bit(17)	Isolated digital input 18 (NPN or PNP, depending on the connection of the group's common pin).
15	Digital Output Common Power (7 to 9)		Common power pin for isolated digital outputs 7 to 9.
16	Digital Output Common Return (7 to 9)		Common power return for isolated digital outputs 7 to 9.
17	Analog Output 3	AOutPort[3]	Analog output 3
18	GND		Ground for analog output
19	I/O Power		Connected internally to X7: I/O PWR pin 1, I/O Power
20	I/O Power Return		Connected internally to X7: I/O PWR pin 2, I/O Power Return

Connector manufacturer	Dowei 3M	DW-20-3 10120-3000PE and 10320-52A0-008
Wiring	AWG 26, insulation rated for 100 V	

### 3.4.10 Interface X2: Ethernet (LAN)

Connector X2 is an Ethernet communication port.

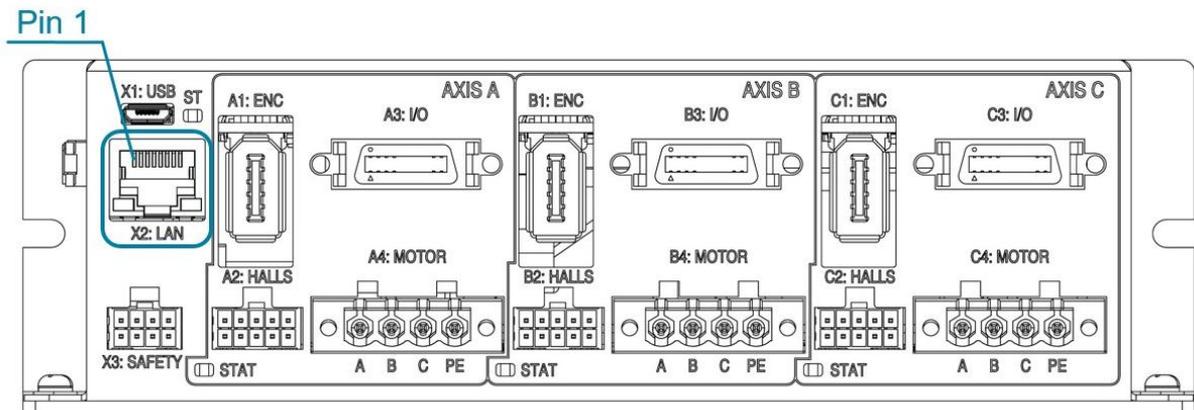


Figure 23. Ethernet Connector

#### Connector X13: LAN (Ethernet)

Pin #	Name	Description
1	TX+_D1	Transmit data +
2	TX-_D1	Transmit data -
3	RX+_D2	Receive data +
4	BI+_D3	Bi-directional +
5	BI-_D3	Bi-directional -
6	RX-_D2	Receive data -
7	BI+_D4	Bi-directional +
8	BI-_D4	Bi-directional -

Connector type	RJ45 LAN 10/100Base-T connector
Mating connector options	Any CAT5e compatible shielded connector
Cable	CAT5e or higher, standard Ethernet straight cable
Wiring	26 AWG, insulation rated for 100 V

## Installation

### 3.4.11 Interfaces X8, X9: CAN, RS232, RS485

Connectors X8 and X9 are serial RJ45 communication ports.

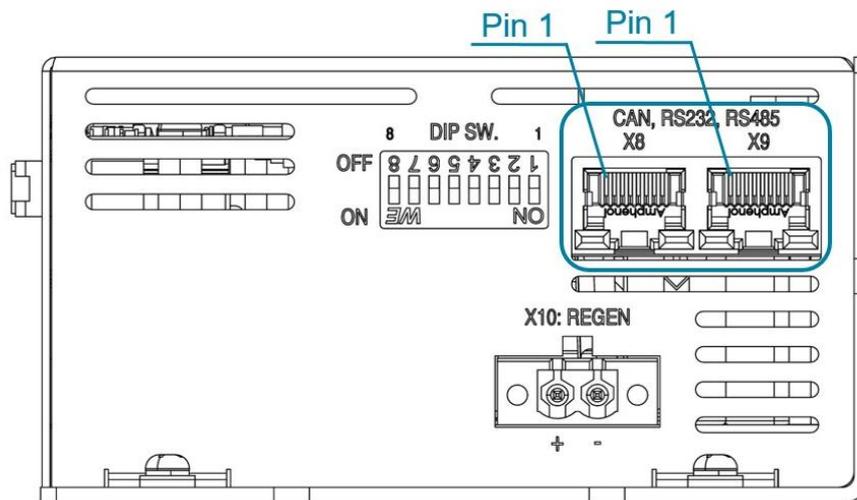


Figure 24. Serial Communication Connectors

#### Connector X8 and X9: CAN, RS232, RS485

Pin #	Name	Description
1	GND	Digital Ground
2	RS232_RX	RS232 input (product receive)
3	RS232_TX	RS232 output (product transmit)
4	RS485_B	RS485 bus, inverted
5	RS485_A	RS485 bus, not inverted
6	Sync	Reserved for future use
7	CAN_L	CAN bus, Low
8	CAN_H	CAN bus, High

Connector type	RJ45 LAN 10/100Base-T connector
Mating connector options	Any CAT5e compatible shielded connector
Cable	CAT5e or higher, standard Ethernet straight cable
Wiring	26 AWG, insulation rated for 100V



#### Dual port connector

The serial port is a dual-port RJ45 connector. The two ports have identical pinouts and are interchangeable. Two ports are provided to support daisy chain connection of a CAN bus or RS485. It can be also used to connect two types of communication channels at the same time, instead of splitting a cable from a single RJ45 connector.

## Installation



### CAN bus and RS485 terminators

The CAN bus lines have an optional 120Ω terminator that is connected/disconnected by DIP switch #1 in the DIP software interface (on the top panel). Setting dip switch #1 to the ON position connects a 120Ω terminator between CAN\_H and CAN\_L. The terminator is required only in the last unit in the CAN bus chain.

The RS485 lines have a built-in (not optional) 120Ω terminator. Communication performance may be degraded if too many units are placed on the RS485 chain.

### 3.4.12 Interface X1: Micro-USB

Connector X1 is a Micro-USB communication port.

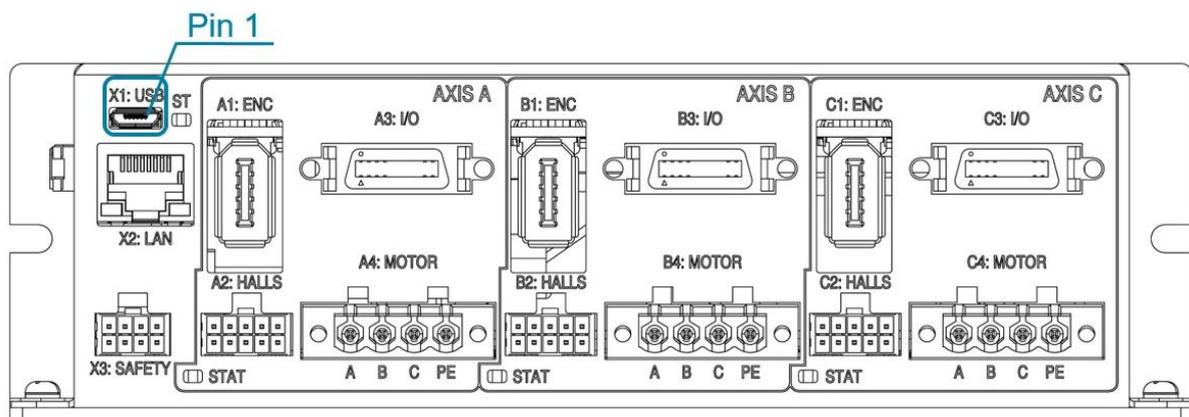


Figure 25. USB Connector

#### Connector X1: Micro-USB

Pin #	Name	Description
1	Vcc	5V
2	D-	Data-
3	D+	Data+
4	ID	USB OTG ID
5	GND	GND

Connector type	Micro-USB 2.0 B
Cable	Any Micro-USB 2.0 B-type cable
Wiring	26–28 AWG, insulation rated for 100V



### USB to RS232 bridge

The Micro-USB connection is implemented using an internal converter/adaptor from USB to RS232 (UART). Typically, the Windows OS contains a built-in driver for the converter/adaptor. If necessary, you can access drivers at: <http://www.ftdichip.com/Drivers/D2XX.htm>.

## Installation

### 3.4.13 Interface X4: General Purpose I/Os

Connector X4 (GENERAL I/O) provides I/Os for the connection of external devices to the AGD301: 1 analog input, 1 analog output, 8 digital outputs, and 8 bi-directional differential I/Os, configurable as either input or output by software.

Additional I/Os are available on interfaces A2, B2, C2 (Halls), and interfaces A3, B3, and C3 (General I/Os).

For schematics and more information about these interfaces, refer to the section *I/O Connection Diagram Example*.

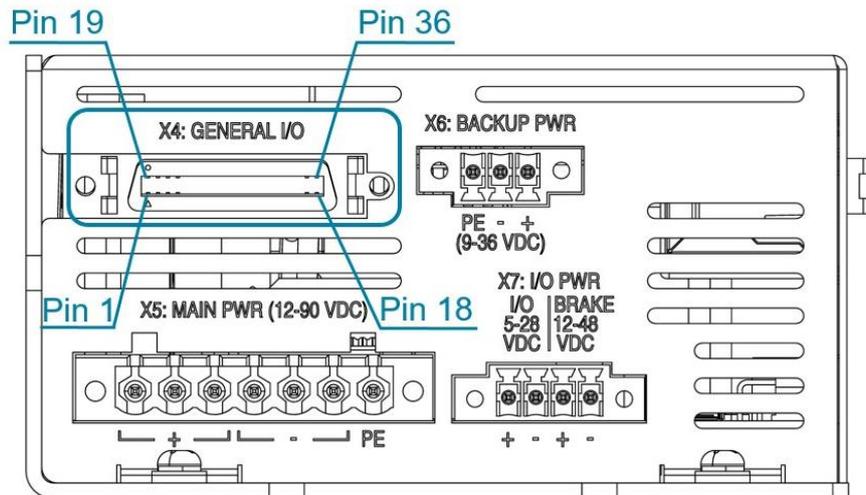


Figure 26. General Purpose I/O Connector



#### Bi-directional differential I/Os

The electrical interfaces of the 8 bi-directional differential I/Os are all identical.

#### Connector X4: GENERAL I/O

Pin #	Name	Software Representation	Description
1	Bi-Dir Diff I/O 1 +	DInPort.bit(27) DOutPort.bit(17)	Bi-directional differential I/O 1+   Axis A Pulse Input+ Software configurable: BiDirConfig.bit(0) = 0 for input BiDirConfig.bit(0) = 1 for output
2	Bi-Dir Diff I/O 1 -		Bi-Directional differential I/O 1-   Axis A Pulse Input -
3	Bi-Dir Diff I/O 3 +	DInPort.bit(29) DOutPort.bit(19)	Bi-directional differential I/O 3+   Axis B Pulse Input+ Software configurable: BiDirConfig.bit(2) = 0 for input BiDirConfig.bit(2) = 1 for output

Pin #	Name	Software Representation	Description
4	Bi-Dir Diff I/O 3 -		Bi-Directional differential I/O 3-   Axis B Pulse Input-
5	Analog Input 4	AIInPort[4]	±12V, 12-bit.
6	Analog Input Return 4		Analog input 4 return. Must connect to GND if analog input is single-ended.
7	5V		Limited to 0.5A
8	GND		GND for 5V and differential signals
9	Bi-Dir Diff I/O 6 +	DInPortHigh.bit(1) DOutPort.bit(22)	Bi-directional differential I/O 6+   Axis C Direction Input+ Software configurable: BiDirConfig.bit(5) = 0 for input BiDirConfig.bit(5) = 1 for output
10	Bi-Dir Diff I/O 6 -		Bi-Directional differential I/O 6-   Axis C Direction Input-
11	Digital Output 10	DOutPort.bit(9)	Isolated digital output 10, programmable sink or source
12	Digital Output 11	DOutPort.bit(10)	Isolated digital output 11, programmable sink or source
13	Digital Output 12	DOutPort.bit(11)	Isolated digital output 12, programmable sink or source
14	Digital Output 13	DOutPort.bit(12)	Isolated digital output 13, programmable sink or source
15	Digital Output 14	DOutPort.bit(13)	Isolated digital output 14, programmable sink or source
16	Digital Output 15	DOutPort.bit(14)	Isolated digital output 15, programmable sink or source
17	Digital Output 16	DOutPort.bit(15)	Isolated digital output 16, programmable sink or source
18	Digital Output 17	DOutPort.bit(16)	Isolated digital output 17, programmable sink or source
19	Bi-Dir Diff I/O 2 +	DInPort.bit(28) DOutPort.bit(18)	Bi-directional differential I/O 2+   Axis A Direction Input+ Software configurable: BiDirConfig.bit(1) = 0 for input BiDirConfig.bit(1) = 1 for output
20	Bi-Dir Diff I/O 2 -		Bi-Directional differential I/O 2-   Axis A Direction Input-
21	Bi-Dir Diff I/O 4 +	DInPort.bit(30) DOutPort.bit(20)	Bi-directional differential I/O 4+   Axis B Direction Input+ Software configurable: BiDirConfig.bit(3) = 0 for input BiDirConfig.bit(3) = 1 for output

Pin #	Name	Software Representation	Description
22	Bi-Dir Diff I/O 4 -		Bi-directional differential I/O 4-   Axis B Direction Input-
23	GND		GND for 5V and differential signals
24	Analog Output 4	AOutPort[4]	Analog output 4, +/-12V, 16 bits
25	Bi-Dir Diff I/O 5 +	DInPortHigh.bit(0) DOutPort.bit(21)	Bi-directional differential I/O 5+   Axis C Pulse Input+ Software configurable: BiDirConfig.bit(4) = 0 for input BiDirConfig.bit(4) = 1 for output
26	Bi-Dir Diff I/O 5 -		Bi-directional differential I/O 5-   Axis C Pulse Input-
27	Bi-Dir Diff I/O 7 +	DInPortHigh.bit(2) DOutPort.bit(23)	Bi-directional differential I/O 7+ Software configurable: BiDirConfig.bit(6) = 0 for input BiDirConfig.bit(6) = 1 for output
28	Bi-Dir Diff I/O 7 -		Bi-directional differential I/O 7-
29	Bi-Dir Diff I/O 8 +	DInPortHigh.bit(3) DOutPort.bit(24)	Bi-directional differential I/O 8+ Software configurable: BiDirConfig.bit(7) = 0 for input BiDirConfig.bit(7) = 1 for output
30	Bi-Dir Diff I/O 8 -		Bi-directional differential I/O 8-
31	Digital Output Common Power (10 to 13)		Common power pin for isolated digital outputs 10 to 13
32	Digital Output Common Return (10 to 13)		Common power return pin for isolated digital outputs 10 to 13
33	Digital Output Common Power (14 to 17)		Common power pin for isolated digital outputs 14 to 17
34	Digital Output Common Return (14 to 17)		Common power return pin for isolated digital outputs 14 to 17
35	I/O Power		I/O power supply, connected internally to X7: I/O PWR pin 1, I/O Power
36	I/O Power Return		I/O power supply, connected internally to X7: I/O PWR pin 2, I/O Power Return

Mating connector options	Dowei 3M	DW-36-3 10136-3000PE + 10336-52F0-008
Wiring	26 AWG, insulation rated for 100V	



**Note – 5V supply limitation**

The 5V supply provided at pin 7 is limited to 0.5A. The maximum total current provided by all the 5V pins in the product is limited to 1.5A.

## Installation

### I/O Connection Diagram Example

#### Isolated Digital Input 1 to 6, 7 to 12, 13 to 18

- Isolated digital inputs are organized as groups with a dedicated common pin. This enables connection to different voltage supplies. Each group is fully isolated and independent of the other groups.
- The AGD301 has three groups of inputs: digital inputs 1 to 6, digital inputs 7 to 12, and digital inputs 13 to 18.
- Each group can be connected as NPN or PNP interfaces, depending on the wiring of the group's common pin. If the common pin is connected to power (5V to 28V), then the inputs of this group can be used with external NPN devices (external current sinking devices). If the common is connected to the GND of some external power, then the inputs can be used with external PNP devices (external current sourcing devices).
- The input circuit of the opto-couplers includes two diodes. This enables use as NPN or PNP.
- One group can be wired to interface external NPN devices, and another group can be wired to interface PNP devices. However, within a group, all interfaces (NPN or PNP) must be the same, as they are based on the connection of the group's common pin.

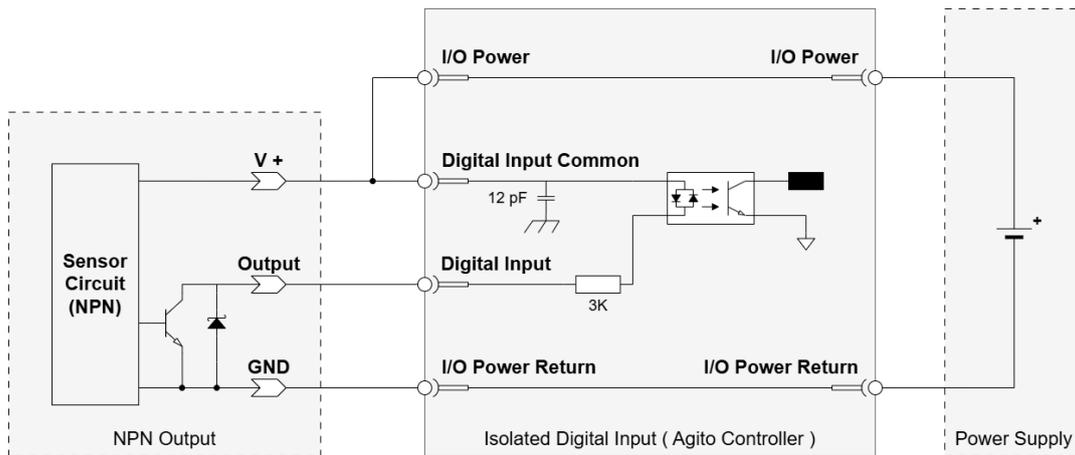


Figure 27. Digital Input with NPN Sensor

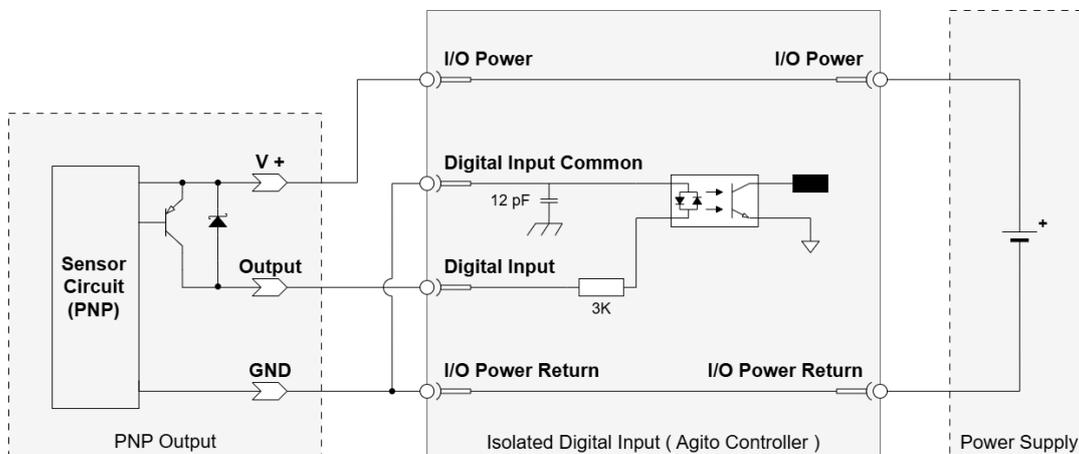


Figure 28. Digital Input with PNP Sensor

## Installation

### Isolated Digital Output 1 to 3, 4 to 6, 7 to 9, 10 to 13, 14 to 17

- The AGD301 has 5 groups of digital output, digital outputs 1 to 3, 4 to 6, 7 to 9, 10 to 13, and 14 to 17.
- The digital output interface circuit is identical for all 17 outputs.
- Each output can be programmed (by a software parameter) to act as a current sourcing output (up to 300mA) or as a current sinking output (up to 500 mA).
- The outputs are designed for resistive loads. For inductive loads, an external flyback diode is required.
- Digital outputs specifications:
  - Digital Output Common Power voltage range is between 5V and 28V.
  - Maximal load current, per each output:
 

Sink mode, any Digital Output Common Power voltage:	500 mA
Source mode, at 24V Digital Output Common Power:	300 mA
Source mode, at 5V Digital Output Common Power:	60 mA (see Note below)



#### Note – 5V Digital Output Common Power source mode limitation.

When using 5V Digital Output Common Power, higher current (but less than the absolute maximum value of 250 mA) can be driven. However, the output high voltage will drop significantly. To maintain output high voltage at >4.5V, limit the current to 60 mA.

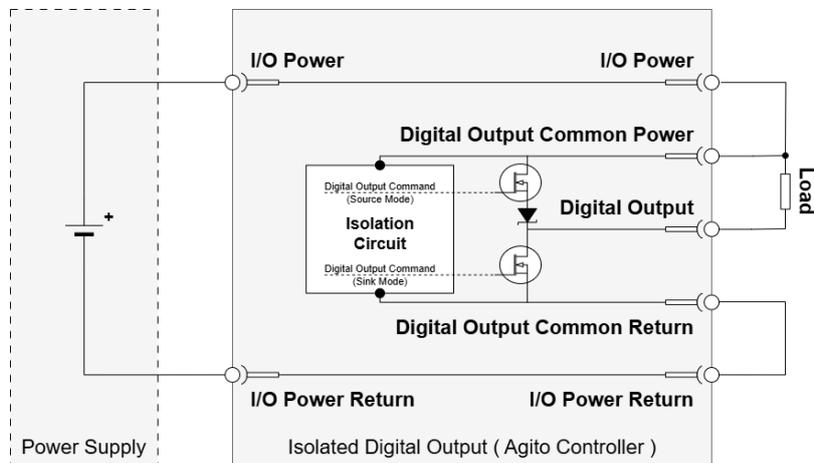


Figure 29. Digital Output (Sink Mode)

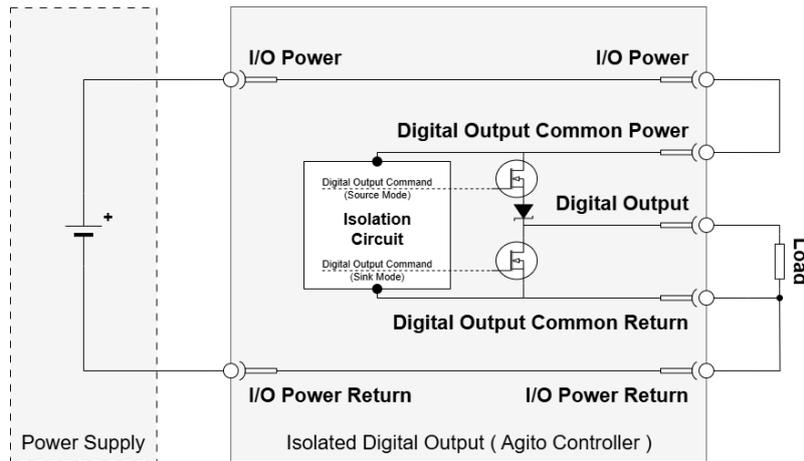


Figure 30. Digital Output (Source Mode)

### Analog Input 1 to 4

- The electrical interfaces of analog inputs 1, 2, 3, and 4 are identical.
- The analog input range is -12V to +12V, and resolution is 12 bits.
- The analog input is designed for standard differential analog input, with a simple input circuit, having an input resistance of ~60 kΩ.
- For single-ended analog inputs, be sure to connect the return line to GND. Do not leave it unconnected.
- Input circuit bandwidth: 1 kHz, -40 dB/decade
- The controller software provides the following parameters to control the analog input reading:
  - Filter
  - Offset
  - Deadband
  - Gain

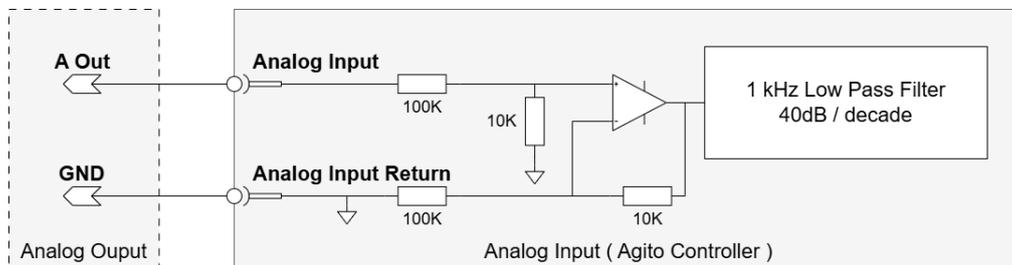


Figure 31. Analog Input

### Analog Output 1 to 4

- The electrical interfaces of all analog outputs 1, 2, 3 and 4 are identical.

## Installation

- The analog output range is from -12V to +12V, with resolution of 16 bits.
- Output resistance is 10 $\Omega$ .
- Output current is up to  $\pm 2$  mA, without internal current limitation.
- Analog outputs are controlled by the controller software in few operational modes:
  - Analog output controlled by the user program for a general purpose.
  - Analog output reflects the internal value of a user selected parameter (position, position error, velocity, current, or any parameter/status of the controller), with a user defined scaling factor, for easy monitoring using an external oscilloscope.

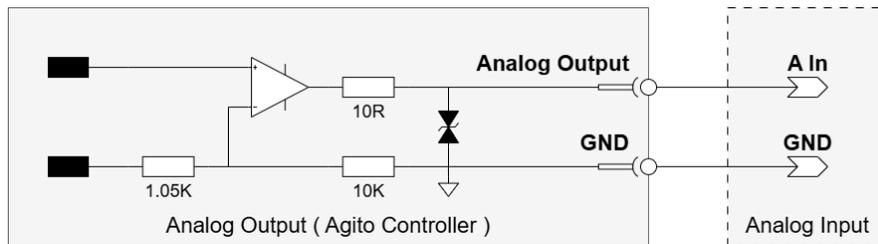


Figure 32. Analog Output

## Bi-Directional Differential I/O 1 to 8

- The bi-directional differential output is configurable by software to be a differential output or differential input.
- Both + and - pins are pulled up to 3.3V.
- There is a 120 $\Omega$  termination resistor between the + and - pins.

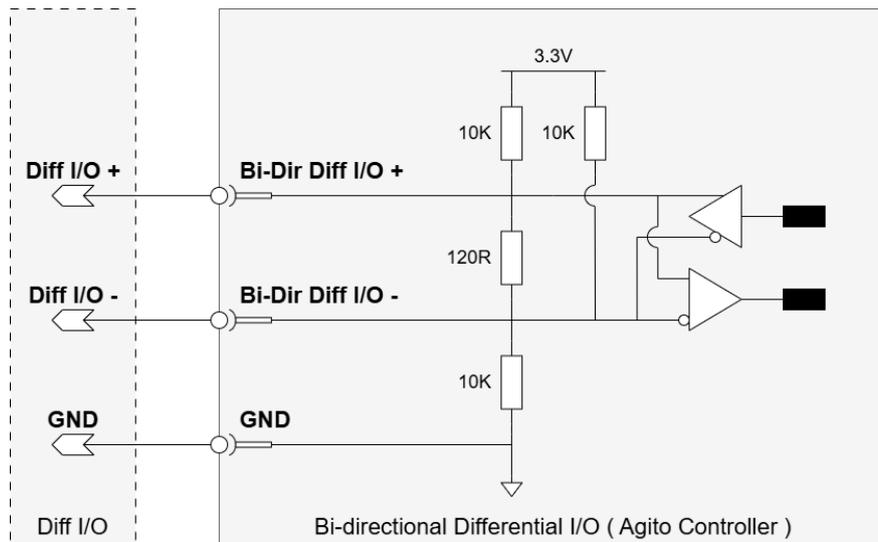


Figure 33. Bi-Directional Differential I/O

## Installation

### 3.4.14 DIP Switches

The AGD301 includes 8 DIP switches to define CAN or Ethernet address offset, to connect a 120Ω CAN terminator resistor, to activate firmware download mode, and set other functions. These are hardware configurations that are typically done only once, during product installation.

The value of the DIP switches, as read by the controller during power on (or reset), can be queried using ADebugData[4] in Agito PCSuite terminal.

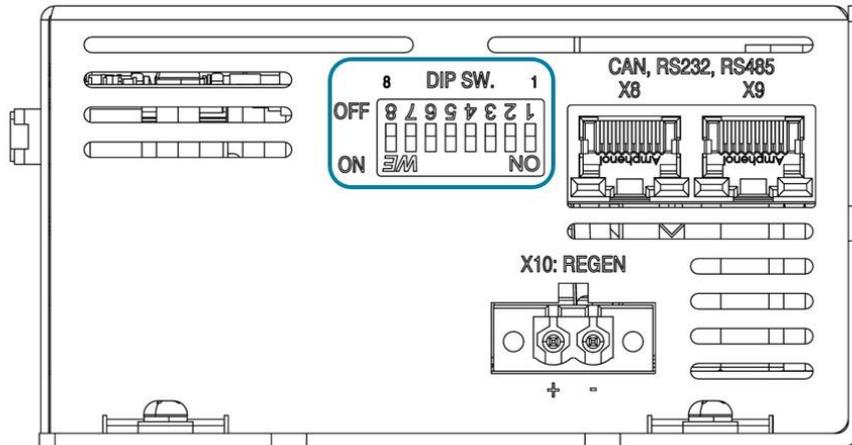


Figure 34. DIP Switches

#### DIP Switches

DIP Switch #	Function	Description
1	CAN Bus Terminator	Set to ON to connect 120Ω terminator resistor. Only the last unit in the CAN network needs to have this set to ON.
2	Force Download Firmware	Set to ON and power cycle to force the product into firmware download mode. Otherwise, always keep in OFF state.
3	Force Communication to Default	Forces the controller to default communication parameters (bypassing other software parameters in the controller): Ethernet IP: 172.1.1.101 Ethernet Port: 50000 CAN Address: 64 CAN and RS232/USB baud rates are not affected by this DIP switch. Requires power cycle or reset.
4-6	CAN/Ethernet Address Offset DIP Switch 4 – Most significant bit DIP Switch 6 – Least significant bit	DIP switches 4-5-6 create a three-bit value. For example, if DIP switch 4 is set to ON (value of 1), and 5 and 6 are set to OFF (value of 0), the result is: 100 (binary), meaning a value of 4. This value (referred to as <i>offset</i> ) is used to define the drive's CAN bus address and Ethernet IP address as follows: <b>Ethernet IP:</b> the actual fourth number of the IP address is equal to: EthernetIP [4] + <i>offset</i> <b>CAN address:</b> the actual CAN address of the unit is equal to: CANAddr + <i>offset</i> * 16 Note: Requires power cycle or reset.

DIP Switch #	Function	Description
7	Reserved for Future Use	Always keep at OFF state.
8	Reserved for Future Use	Always keep at OFF state.

### 3.4.15 Status LED

A bi-colored LED, marked **ST**, shows the operational status of the AGD301.

#### ST - Status LED indicator

Color	LED	Meaning
–	Off	Powered off
Red	On steady	Fault
Green	On steady	Normal operation
Green	Blinking fast	In Boot mode
Green	Blinking slow	Firmware downloads in progress

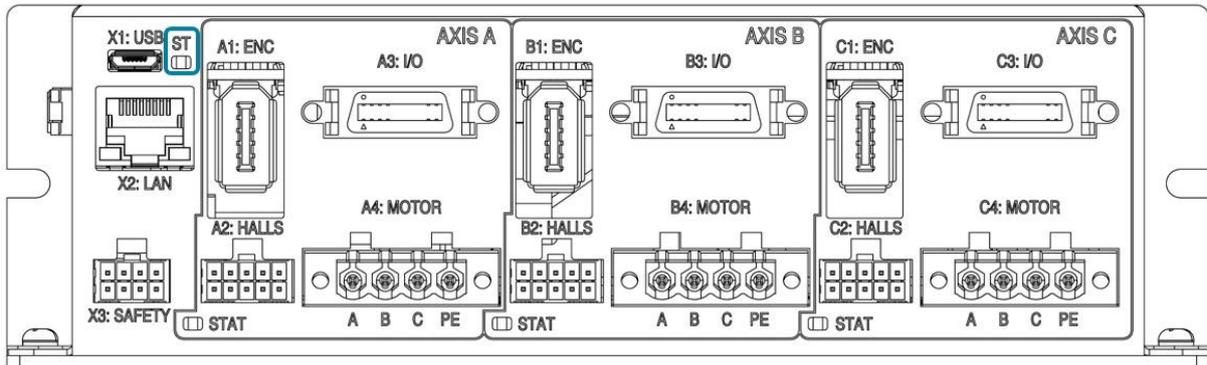


Figure 35. Status (ST)

